



**PNEUMAX**



## **PX3-M**

- **Optima-S EVO 2200 Series**
- **2700 EVO Series**

Installation, use and maintenance manual

**ELECTRONICS**



# ENGLISH

## TABLE OF CONTENTS

1.	About this document .....	2
2.	Safety Warnings .....	2
3.	Conditions of Use .....	3
4.	Normative references .....	3
5.	General overview .....	4
5.1	Communication interfaces .....	6
5.1.1	CANopen Interface .....	8
5.1.2	PROFIBUS DP Interface .....	22
5.1.3	Profinet IO RT Interface .....	31
5.1.4	EtherCAT® Interface .....	44
5.1.5	CC-LINK IE Field Basic Interface .....	53
5.1.6	EtherNet/IP Interface .....	64
5.1.7	IO-Link Interface .....	77
5.2	WEB PAGE .....	89
5.3	Accessory modules .....	101
5.3.1	M12 digital output 16 module kit .....	101
5.3.2	M12 digitale input 16 module kit .....	105
5.3.3	Additional power supply module .....	109
6.	Annexes .....	113
6.1	Counterparts Cables and Connectors .....	113
6.2	Tightening torques .....	115
7.	Maintenance and cleaning .....	116
8.	Handling and storage conditions .....	116
9.	Dismantling and disposal .....	116



## 1. ABOUT THIS DOCUMENT

- All available documents on the product can be found at [www.pneumaxspa.com](http://www.pneumaxspa.com)
- This document refers to the interfaces and accessory modules that can be combined with the solenoid valve series 2200 OPTYMA-S EVO and 2700 EVO listed in the chapter 'General Overview'.
- This document has been drafted and checked to the best of the ability of PNEUMAX S.p.A. (hereinafter also referred to as 'Manufacturer').
- PNEUMAX S.p.A. is not responsible for its use and reserves the right to make changes to the product and the information provided below without prior notice.
- No part of this document may be copied, edited, reproduced, translated into any language or transmitted by any data communication system without the consent of PNEUMAX S.p.A.
- CANopen®, PROFIBUS DP, EtherNet/IP, PROFINET IO RT, IO-Link, EtherCAT®, CC-Link IE Field Basic are registered trademarks of the owner in the individual country.

## 2. SAFETY WARNINGS

- The Manufacturer shall not be held liable for any consequences that may arise from failure to comply with the instructions in this manual.
- So as not to jeopardise the proper operation of the device and cause hazards to persons and property, thus invalidating the warranty and conformity of the device with the essential requirements of the relevant directives, any form of tampering or intervention not authorised by PNEUMAX S.p.A. through this manual or any other official document is strictly prohibited.
- The product is not intended for use in environments with a potentially explosive atmosphere.
- Do not use the product in places where static electricity poses a problem.
- Protect the product from moisture, UV radiation, corrosion, vibration and shock.
- Pay attention to external factors such as the proximity of live cables, magnetic fields, magnetically exposed conductive metal parts very close to the device that can affect and disturb the system.
- Do not exceed the current capabilities of each individual interface or accessory module.
- To ensure IP65 protection, all unused connectors must be closed with the appropriate caps.
- Applying supply voltages beyond the technical specifications may cause irreparable and irreversible damage to the system.
- Only use power supplies that guarantee a safe electrical disconnection of the operating voltage according to IEC/EN 60204-1.
- Comply with the requirements for PELV circuits according to IEC / EN 60204-1
- The device must be installed and put into service by qualified personnel in accordance with the operating instructions
- Before working on the product, switch off the electrical and pneumatic power supplies, taking care to empty the pneumatic circuit, and ensure that it is not switched back on by third parties during operations.
- Strictly meet the conditions of use set out in the dedicated section.

### 3. CONDITIONS OF USE

Product compatibility is the responsibility of the person who designs the equipment or chooses its specifications.

All products covered by this manual are intended for use in an industrial environment.

The product warranty is only valid if it is used under the conditions specified in this manual.

For plugs and connectors, it is recommended to use the [codes](#) and [tightening torques](#) in Annexes I, II.

### 4. NORMATIVE REFERENCES

- EMC : 2014/30/EU
- RoHS : 2011/65/EU



## 5. GENERAL OVERVIEW


This modular electronic system has been designed to offer compact and flexible acquisition and control electronics for pneumatic and electrical components; it can be interfaced with the most common communication protocols and configured with both digital and analogue I/O modules.

The modules can be directly integrated with Pneumax S.p.A.'s solenoid valve series:


- Optima-S EVO 2200 Series - hereafter also referred to as Optima-S EVO
- 2700 EVO Series - hereafter also referred to as 2700 EVO

The bodies and sub-base made of aluminum and the robust design, studied to optimise the overall dimensions of the system, make the solenoid valve batteries of the above series extremely proof and guarantee maximum flexibility of use.

2200 OPTYMA-S EVO SERIES

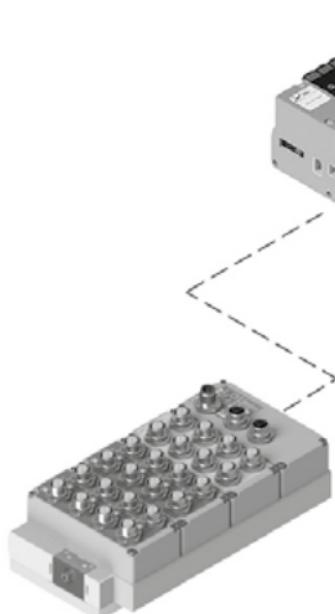

SERIE 2700 EVO SERIES

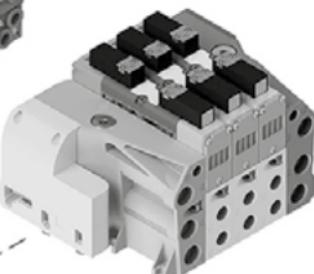

## Interfaces

DESCRIPTION	CODE	PAGE
CANopen interface	K5527.64.xxCO	8
Profibus DP interface	K5327.64.xxPB	22
PROFINET IO RT interface	K5727.128.48PN	31
EtherCAT® interface	K5727.128.48EC	44
CC-Link IE Field Basic interface	K5727.128.48CL	53
EtherNet/IP interface	K5727.128.48EI	64
IO-Link interface	K5827.64.xxIK	77

## List of available accessory modules

DESCRIPTION	CODE	PAGE
Digital output module kit	K5127.16.M12	101
Digital input module kit	K5227.16.M12	105
Supplementary power supply module kit	K5027.M12	109

NOTE: Accessory modules can be connected in any order and configuration



## 5.1 Communication interfaces

### Current limits

All communication interfaces (except IO-link interfaces see dedicated section) have two electrically separated positive supply pins:

- Pin 1: +24V DC for supplying logic circuits and loads on digital inputs, hereinafter abbreviated as +24V DC logics and inputs
- Pin 4: +24V DC for powering solenoid valves and loads digital outputs, hereafter abbreviated +24V DC OUTPUTS

Stand-alone and integrated configurations must both comply with the current limits of the communication interface.

The following formula is used to calculate the maximum current on the +24V DC OUTPUTS :

Where:

$$I_{24V\ DC\ out} = \sum_{i=1}^n I_{out,i} + m i_{EV}$$

- $n$ =is the number of installed modules
- $I_{out,i}$ =is the maximum total current drawn on +24V DC OUTPUTS by the  $i$ -th module (see individual module specifications)
- $m$ =is ol number of installed electro-pilots
- $i_{EV}$ =is the average current drawn by each electro-pilot

For your convenience, the power consumption of Pneumax S.p.A. solenoid valves is shown below:

Series	$i_{EV}$
Optyma-S EVO 2200 Series	36mA
2700 EVO Series	24mA (1W version) / 100mA (2.3W version)

For each communication interface, the maximum current that can be delivered by the +24V DC OUTPUT power supply is 4A. In addition, the sum of the currents on +24V DC OUTPUTS and +24V DC INPUTS must not exceed 4A.

Where:

$$I_{24VDC\ out} + I_{24VDC\ in} < 4A$$

$$I_{24VDC\ in} = \sum_{i=1}^n I_{in,i}$$

$n$  = number of modules installed

$I_{in,i}$  = maximum total current drawn by the  $i$ -th module on +24V DC INPUTS (see individual module specifications)



#### Caution

If the total current exceeds 4A, modules exceeding the limit must be supplied with the K5027.M12 supplementary power supply module (see Supplementary Power Supply Module) .

#### LED symbol interpretations


LED SYMBOL	MEANING
	LED ON
	FLASHING LED
	LED OFF



## 5.1.1 CANopen Interface

The CANopen interface handles 64 bits on input data and 64 bits on output data, of which 32 or 48 bits (depending on the version) are allocated to the valve seats only (hereafter abbreviated as 'EV').

### 5.1.1.1 Product identification

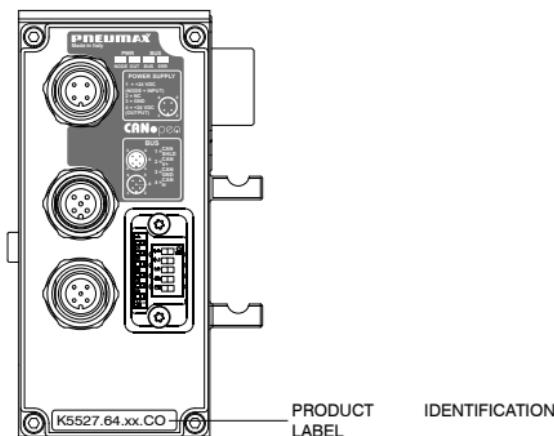

### COMPATIBILITY

	OPTYMA - S EVO	2700 EVO
K5527.64.32CO	●	●
K5527.64.48CO	●	


### 5.1.1.2 Specific safety warnings

All safety warnings given in the '[Safety Warnings](#)' section apply.

In addition:

- Accidental or improper operation of the product can cause failure or malfunctioning of the entire system.
- When setting the DIP-switches, electrostatic discharges, even if not perceived, can damage the product: ensure that the body is electrostatically discharged before opening the protection and setting the DIP-switches.

### 5.1.1.3 Product Overview

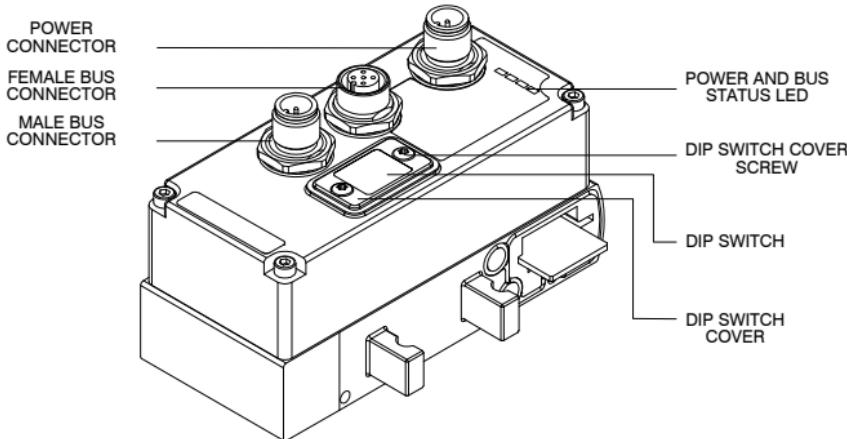

## Byte distribution

The CANopen® node handles up to 64 bits of inputs and outputs.

Both versions have a fixed configuration of the number of inputs and outputs (8 bytes), regardless of how many are actually used.

Consequently, only those associated with inputs and outputs physically connected to the node should be considered as useful data. Each of the two nodes accepts from the CANopen® master 2 PDOs consisting of 8 bytes, one relating to input status (TPDO1) and the other relating to outputs (RPDO1).


The accessory modules, located to the left of the node, can be connected in any order and configuration.

E.g.


K5527.64.32CO	4 Bytes (from byte 0 to byte 3) always allocated to the valve positions even if not used the first byte available for output accessory modules will be byte 4 while for input accessory modules it will be byte 0 up to a total of 8 bytes allocated
K5527.64.48CO	6 Bytes (from byte 0 to byte 5) always allocated to the valve positions even if not used the first byte available for output accessory modules will be byte 6 while for input accessory modules it will be byte 0 up to a total of 8 bytes allocated




### Input and output data distribution with CANopen interface K5527.64.32CO

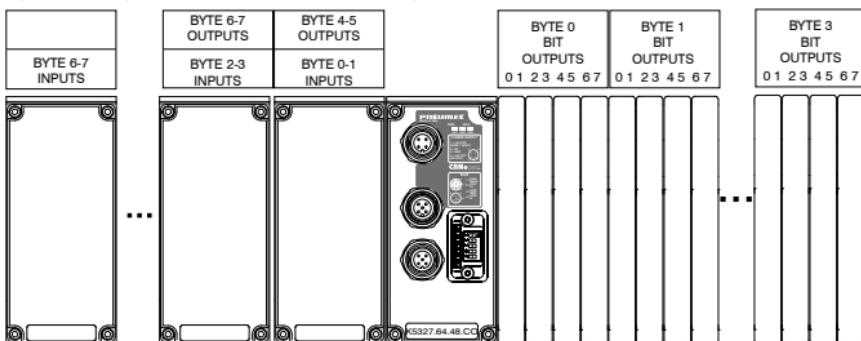

### Input and output data distribution with CANopen interface K5527.64.48CO

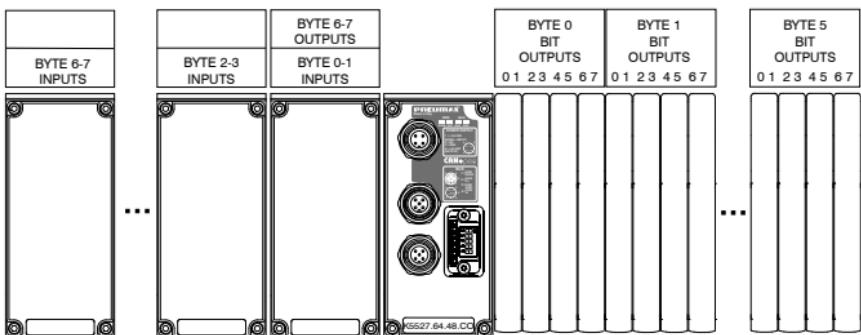


### Example of input and output data distribution with CANopen interface K5527.64.48CO

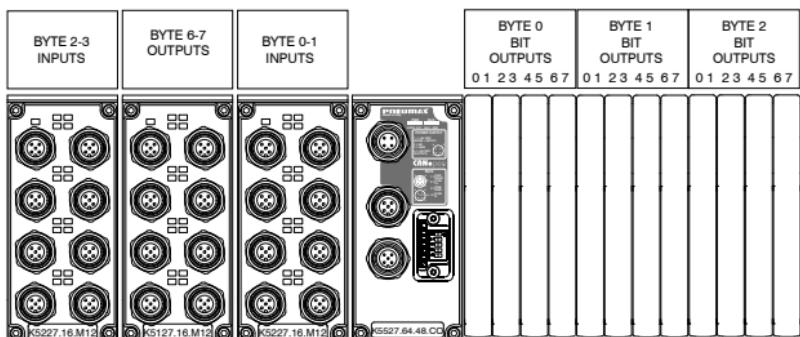

- Signal Connections


CANopen bus connectors are in parallel set-up

The pinout complies with the CiA 106 specification (V.1.1.0 : 11 July 2023)

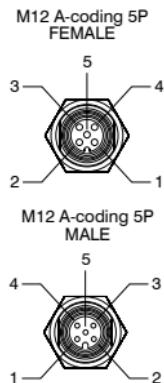

PIN	SIGNAL	DESCRIPTION
1	CAN_SHLD	Optional CAN Shield
2	CAN_V+	Optional CAN external positive supply (Dedicated for supply of transceiver and Optocouplers, if galvanic isolation of the bus node applies)
3	CAN_GND	0V DC
4	CAN_H	CAN_H bus line (dominant high)
5	CAN_L	CAN_L bus line (dominant low)

- Electrical Connections

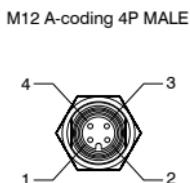

PIN	SIGNAL
1	+24V DC (LOGIC AND INPUTS)
2	NC
3	0V DC
4	+24V DC (OUTPUTS)
Threading	F.E.



### 5.1.1.4 Installation and Commissioning

- Cable connection

The cable connectors to be used are shown in the annex '[Cable and Connector Counterparts](#)'. However, other connectors with equivalent specifications can be used.



#### Caution

Always observe the tightening torques given in the table under "[Tightening torques](#)".

If a connector is not used, to ensure IP65 protection, the appropriate plug Code 5300. T12 must be installed with a tightening torque as indicated in the table at "[Tightening torques](#)".

- **CANopen cable specifications**

The cables to be used for the bus connection are 120Ω impedance cables specifically for CANopen buses.

- **Access to configuration DIP switches**

To access the DIP switches, the plate must be removed by unscrewing the fixing screws with a PH1 head screwdriver. To put the plate back in, the screws must be tightened to the torque indicated in the table under [Tightening torques](#).

- **Baud rate and cable length**

There are several factors that contribute to signal loss: many are related to the quality of the cables themselves; however, one factor that cannot be eliminated is the delay in signal propagation between the ends of the line and between the line and the individual nodes on the branches. The following table gives an indication of the maximum line length in relation to the baud rate:

Bus length (m)	Signal speed (kbps)
30	1000
50	800
100	500
250	250
500	125
1000	50
2500	20
5000	10

As the number of nodes pertaining to the line or the length of the line increases, the quality of the cable must also increase and, if necessary, a repeater must be inserted to ensure sufficient signal quality.

Refer to the control system manuals and technical literature for further details.

### Line drifts


The CANopen communication interface has two network connectors in parallel, allowing the use of 'T' adapters to be avoided. In the event that you are forced to create a branch with a 'T' adapter attached to a section of cable, please note that branches are included in the calculation of the maximum total length of the line and that they significantly degrade the signal, so they should be kept as short as possible. For further information, refer to CiA Recommendation 303-1 (V. 2.0.1: 27 February 2023) and command system documentation.

### Line terminations

The bus must be terminated at both ends to reduce signal reflections.


The 120Ω termination is enabled on the device by activating both DIP switches at positions 1 and 2 of DIP switch 'S2'.

- DIP switches S1 and S2 can be set:
  - S1: address
  - S2: baud rate and termination.

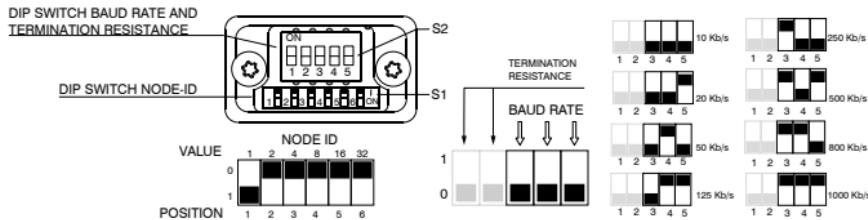

### Caution

The DIP switches must be moved by completing the movement to the end stop.

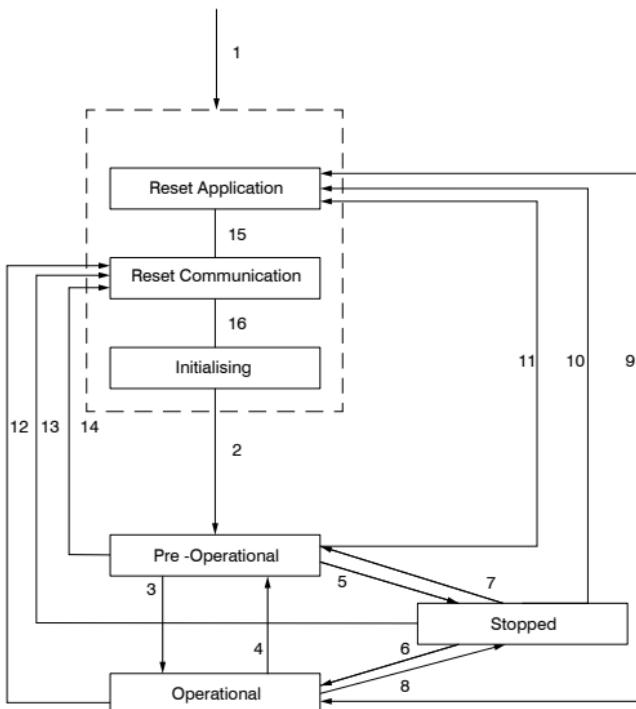

1	The initialisation state is automatically entered at power-on
2	Initialisation complete - enters pre-operational automatically
3,6	Start_remote_Node indication
4,7	Enter_PREOPERATIONAL_State indication
5,8	Stop_remote_Node indication
9,10,11	Reset_Node indication
12,13,14	Reset_communication indication

Elenco codici errore emergenza trasmessi (Emergency error codes) :

0x8110 = CAN overrun (objects lost)  
0x8120 = CAN in error passive mode  
0x8130 = Life guard error or heartbeat error  
0x8140 = Recovered from bus off

**OBJECT SUMMARY TABLE**

Below is the meaning of the abbreviations used:

RO = read only  
 RW = read/write  
 RWW = read/write for SDO  
 CONST = read only access, but the value is always the same, it's constant

Index (hex)	Subindex (hex)	Register Name	Type	Access	Value	Description
1000	00	Device Type	4	RO	03 01 91	9101 device profile, model with digital inputs and outputs
1001	00	ErrorRegister	1	RO	00	No error
1003		PreDefinedErrorField				
	00	NumbeROfErrors	1	RW	00	Number of errors
	01	StandardErrorField	4	RO	00 00 00 00	
	02	StandardErrorField	4	RO	00 00 00 00	
	03	StandardErrorField	4	RO	00 00 00 00	
	04	StandardErrorField	4	RO	00 00 00 00	
	05	StandardErrorField	4	RO	00 00 00 00	
	06	StandardErrorField	4	RO	00 00 00 00	
	07	StandardErrorField	4	RO	00 00 00 00	
	08	StandardErrorField	4	RO	00 00 00 00	
1005	00	COB-ID-SYNC	4	RW	0x00000080	Default SYNC Message COB-ID 80h
1008	00	ManufacturerDeviceName	STRING	const	3KCO	Product identification
1009	00	ManufacturerHardware-Version	STRING	const	1.00	Hardware version in use
100A	00	ManufacturerSoftware-Version	STRING	const	1.00	Firmware version in use



Index (hex)	Subindex (hex)	Register Name	Type	Access	Value	Description
100C	00	GuardTime	2	RW	00 00	Guard-Time x Life Time Factor = Node Guarding Time
100D	00	LifeTimeFactor	1	RW	00	Guard-Time x Life Time Factor = Node Guarding Time
1014	00	COB-ID Emergency Message	4	RO	\$NODEID +0x80	COB-ID messages EMCY
1017	00	PROducer Heartbeat Time	2	RW	00 00	Heartbeat time (ms)
1018		Identity Object				General product information
	00	Number Of Entries	1	RO	01	Number of records
	01	Vendor Id	4	RO	0x0000017A	Vendor ID
1200		Server SDO Parameter				SDO Parameters
	00	Number Of Entries	1	RO	02	Number of Records
	01	COB-ID_Client->Server(rx)	4	RO	\$NODEID +0x600	COB-ID+ Node address
	02	COB-ID_Server->Client(tx)	4	RO	\$NODEID+0x580	COB-ID+ Node address

### Uscite Digitali

181...	*	PDO 01 Trasmissione	*	*		
1400		Receive PDOParameter				RPDO Parameters
	00	LargestSub-indexSupported	1	RO	02	Number of records
	01	COB-ID Used By PDO	4	RW	\$NODEID+0x200	COB-ID outputs
	02	TransmissionType	1	RW	FF	Acyclic by default
1600		Receive PDO Mapping				
	00	Number Of Mapped Application Objects In PDO	1	RW	08	Number of records
	01	RPDO1thApplicationObject	4	RW	62 00 01 08	Index of outputs 1...8
	02	RPDO2ndApplicationObject	4	RW	62 00 02 08	Index of outputs 9...16

Index (hex)	Subindex (hex)	Register Name	Type	Access	Value	Description
1600	03	RPDO3rdApplicationObject	4	RW	62 00 03 08	Index of outputs 17...24
	04	RPDO4thApplicationObject	4	RW	62 00 04 08	Index of outputs 25...32
	05	RPDO5thApplicationObject	4	RW	62 00 05 08	Exit index from 33...40
	06	RPDO6thApplicationObject	4	RW	62 00 06 08	Index of outputs 41...48
	07	RPDO7thApplicationObject	4	RW	62 00 07 08	Index of outputs 49...56
	08	RPDO8thApplicationObject	4	RW	62 00 08 08	Index of outputs 57...64
6200		WriteState8OutputLines				
	00	Number_Blocks_8_Outputs_State	1	RO	08	Number of groups with 8 outputs
	01	Write_8_Outputs_1H_8H	1	RWW		Status of outputs 1...8
	02	Write_8_Outputs_9H_10H	1	RWW		Status of outputs 9...16
	03	Write_8_Outputs_11H_18H	1	RWW		Status of outputs 17...24
	04	Write_8_Outputs_19H_20H	1	RWW		Status of outputs 25...32
	05	Write_8_Outputs_21H_28H	1	RWW		Status of outputs 33...40
	06	Write_8_Outputs_29H_30H	1	RWW		Status of outputs 41...48
	07	Write_8_Outputs_31H_38H	1	RWW		Status of outputs 49...56
	08	Write_8_Outputs_39H_40H	1	RWW		Status of outputs 57...64


## Ingressi Digitali

201... 27F...	*	PDO 01 Ricezione	*	*		
1800		TransmitPDOParameter				TPDO Parameters
	0	LargestSub-indexSupported	1	RO	02	Number of records
	1	COB-IDUsedByPDO	4	RW	\$NODEID +0x180	COB-ID inputs
	2	TransmissionType	4	RW	FF	Acyclic by default



Index (hex)	Subin- dex (hex)	Register Name	Type	Access	Value	Description
1A00		TransmitPDOMapping				
	0	NumberOfMappedApplicationObjectsInTPDO	1	RW	08	Number of records
	1	TPDO1thApplicationObject	4	RW	60 00 01 08	Index of inputs from 1...8
	2	TPDO2ndApplicationObject	4	RW	60 00 02 08	Index of inputs from 9...16
	3	TPDO3rdApplicationObject	4	RW	60 00 03 08	Index of inputs from 17...24
	4	TPDO4thApplicationObject	4	RW	60 00 04 08	Index of inputs from 25...32
	5	TPDO5thApplicationObject	4	RW	60 00 05 08	Index of inputs from 33...40
	6	TPDO6thApplicationObject	4	RW	60 00 06 08	Index of inputs from 41...48
	7	TPDO7thApplicationObject	4	RW	60 00 07 08	Index of inputs from 49...56
	8	TPDO8thApplicationObject	4	RW	60 00 08 08	Index of inputs from 57...64
6000		ReadState8InputsLines				
	0	Number_Blocks_8_Inputs_State	1	RO	08	Number of 8-input groups
	1	Read_8_Inputs_1H_8H	1	RO		Status of inputs 1...8
	2	Read_8_Inputs_9h_10H	1	RO		Status of inputs 9...16
	3	Read_8_Inputs_11h_18H	1	RO		Status of inputs 17...24
	4	Read_8_Inputs_19h_20H	1	RO		Status of inputs 25...32
	5	Read_8_Inputs_21h_28H	1	RO		Status of inputs 33...40
	6	Read_8_Inputs_29h_30H	1	RO		Status of inputs 41...48
	7	Read_8_Inputs_31h_38H	1	RO		Status of inputs 49...56
	8	Read_8_Inputs_39h_40H	1	RO		Status of inputs 57...64

## LED STATUS INDICATORS

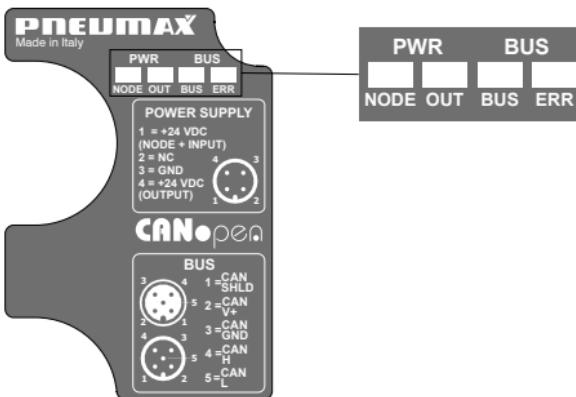

### POWER STATUS LED

NODE	STATUS	COLOUR	MEANING
	OFF	GREEN	No power supply 24V DC logics and inputs
	ON		Presence of +24V DC power supply, logic and inputs
OUT	MEANING		
	OFF	GREEN	No power supply 24V DC outputs
	ON		Presence of 24V DC power supply outputs



## BUS COMMUNICATION STATUS LED

<b>BUS</b>	<b>STATUS</b>	<b>COLOUR</b>	<b>MEANING</b>
	OFF		INIT status or device OFF
	BLINKING		PREOPERATIONAL status
	SINGLE FLASH		STOPPED status
	ON		OPERATIONAL Status

<b>ERR</b>	<b>STATUS</b>	<b>COLOUR</b>	<b>MEANING</b>
	FLICKERING		Node address = 0
	SINGLE FLASH		Can communication error
	DOUBLE FLASH		GUARD TIME error

<b>LED STATUS</b>		<b>DESCRIPTION</b>
LED ON		The LED must be constantly on
LED OFF		The LED must be constantly off
LED FLICKERING		This indicates the switching on and off of the isophase with a frequency of approx. 10 Hz: on for approx. 50 ms followed by off for approx. 50 ms
LED BLINKING		This indicates the switching on and off of the isophase with a frequency of about 2.5 Hz: on for about 200 ms and off for about 200 ms.
LED SINGLE FLASH		This indicates a short flash (approx. 200 ms) followed by a long switch-off phase (approx. 1000 ms).
LED DOUBLE FLASH		The LED shows a sequence of two short flashes (200 ms each), separated by a short 'Off' phase (200 ms). The sequence ends with a long 'Off' phase (1,000 ms).

### 5.1.1.5 Technical Data

#### Mechanical Technical Data

DESCRIPTION	K5527.64.xxCO
Dimensions	114,5x51x52
Weight	271,50g
Body material	Aluminum
Operating temperature	-5°C÷50°C
Storage temperature	-5°C÷50°C
Degree of protection	IP65 (when mounted)

#### Electrical Technical Data


DESCRIPTION	K5527.64.xxCO
Power supply	Supply voltage
	Node power consumption only (on +24V DC logic and inputs)
	Reverse polarity protection
	Maximum Altitude
Communication	Available bus speeds
	Possible addresses
	Addressing data space
	Configuration support
EV Outputs	Maximum current per EV output
	Short circuit protection
	Reverse blow protection



## 5.1.2 PROFIBUS DP Interface

The PROFIBUS interface handles 64 bits on the input data and 64 bits on the output data, of which 32 or 48 bits (depending on version) are allocated to the valve seats only (hereafter abbreviated as 'EV').

### 5.1.2.1 Product identification

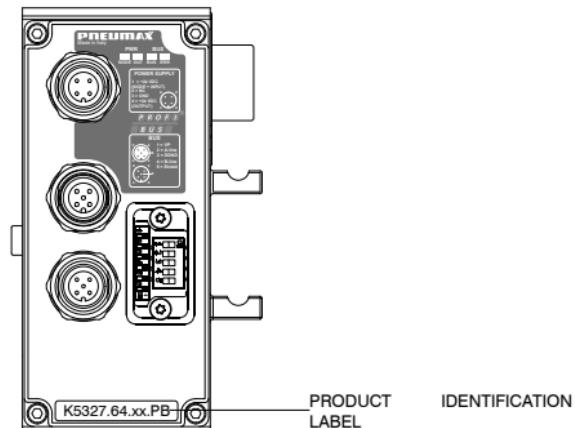

## COMPATIBILITY

	OPTYMA - S EVO	2700 EVO
K5327.64.32PB	●	●
K5327.64.48PB	●	


### 5.1.2.2 Specific safety warnings

All safety warnings given in the '[Safety Warnings](#)' section apply.

In addition:

- Accidental or improper operation of the product can cause failure or malfunctioning of the entire system.
- When setting the DIP-switches, electrostatic discharges, even if not perceived, can damage the product: ensure that the body is electrostatically discharged before opening the protection and setting the DIP-switches.

### 5.1.2.3 Product Overview

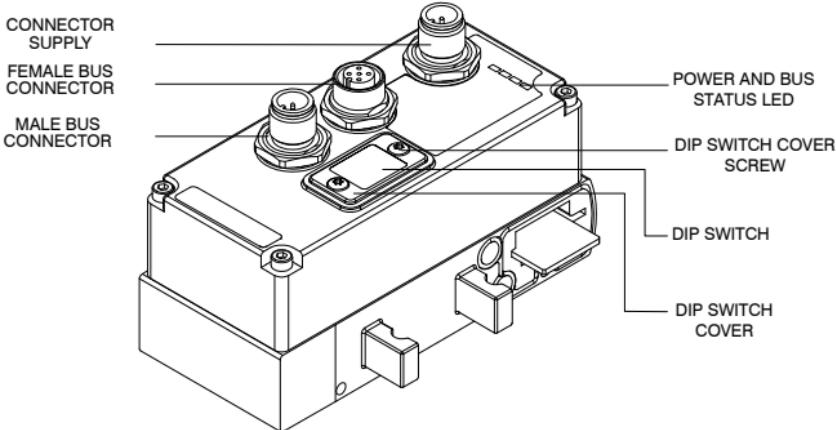

#### Byte Distribution

The PROFIBUS DP node handles up to 64 bits of inputs and outputs.

Both versions have a fixed configuration of the number of inputs and outputs (8 bytes), regardless of how many are actually used.

The accessory modules, located to the left of the node, can be connected in any order and configuration.


E.g.

K5327.64.32PB      4 Bytes (from byte 0 to byte 3) always allocated to the valve positions even if not used the first byte available for output accessory modules will be byte 4 while for input accessory modules it will be byte 0 up to a total of 8 bytes allocated


K5327.64.48PB      6 Bytes (from byte 0 to byte 5) always allocated to the valve positions even if not used the first byte available for output accessory modules will be byte 6 while for input accessory modules it will be byte 0 up to a total of 8 bytes allocated




Input and output data distribution with PROFIBUS DP interface K5327.64.32PB

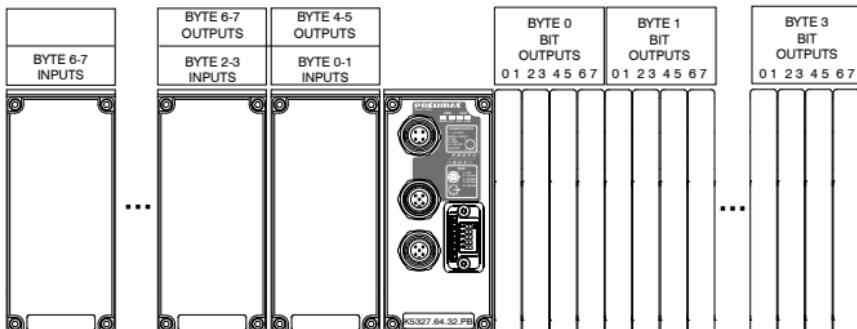

Input and output data distribution with PROFIBUS DP interface K5327.64.48PB

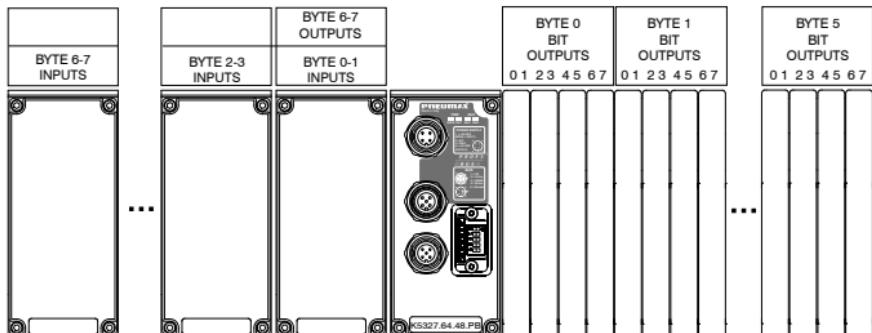


Example of input and output data distribution with PROFIBUS DP interface K5327.64.48PB

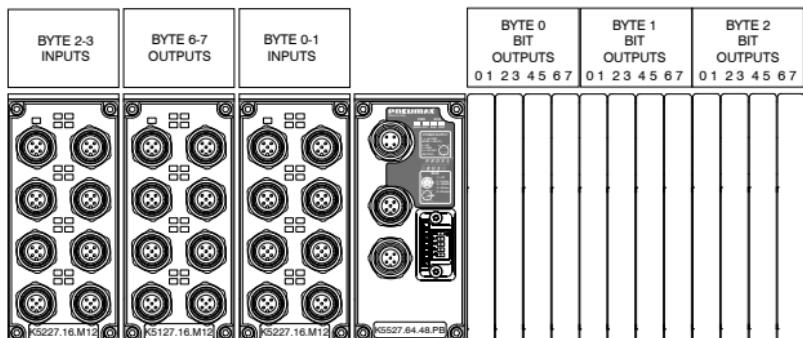


- Signal Connections**

PROFIBUS bus connectors are in parallel set-up

M12 B-coding 5P  
FEMALE

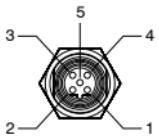


M12 B-coding 5P MALE

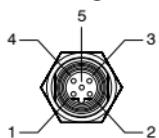

PIN	SIGNAL	DESCRIPTION
1	VP	Additional power supply (P5V)
2	A-line	Receive/Transmit data -N, A-line
3	DGND	Data Ground (reference potential to VP)
4	B-line	Receive/Transmit data -P, B-line
5	SHIELD	Shield or PE

- Electrical Connections**

M12 A-coding 4P MALE

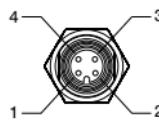

PIN	SIGNAL
1	+24V DC (LOGIC AND INPUTS)
2	NC
3	0V DC
4	+24V DC (OUTPUTS)
Threading	F.E.



### 5.1.2.4 Installation and Commissioning

- Cable connection

The cable connectors to be used are shown in the annex '[Cable and Connector Counterparts](#)'. However, other connectors with equivalent specifications can be used.



**Caution**

Always observe the tightening torques given in the table under '[Tightening torques](#)'.

If a connector is not used, to ensure IP65 protection, the appropriate plug Code 5300. T12 must be installed with a tightening torque as indicated in the table at '[Tightening torques](#)'.

- **PROFIBUS cable specifications**

The cables to be used for the bus connection are  $150\Omega \pm 15\Omega$  impedance cables specific to PROFIBUS bus.

- **Access to configuration DIP switches**

To access the DIP switches, the plate must be removed by unscrewing the fixing screws with a PH1 head screwdriver. To put the plate back in, the screws must be tightened to the torque indicated in the table under '[Tightening torques](#)'.

As the number of nodes pertaining to the line or the length of the line increases, the quality of the cable must also increase and, if necessary, a repeater must be inserted to ensure sufficient signal quality.


Refer to the control system manuals and technical literature for further details.

**Line terminations**


The bus must be terminated at both ends to reduce signal reflections.

The  $220\Omega$  termination is enabled on the device by activating both DIP switches at positions 1 and 2 of DIP switch 'S2'.

**NODE-ID DECINE  
VALUE**


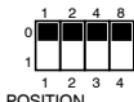


**NODE-ID UNITS  
VALUE**

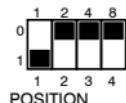

**TERMINATION RESISTANCE**

**VALUE**

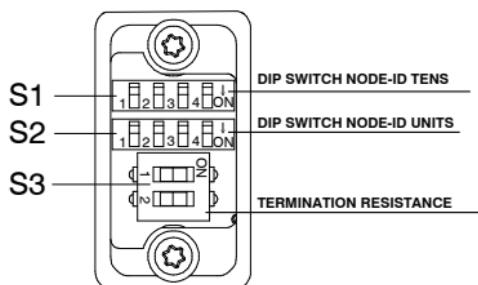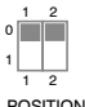


**EXAMPLE ADDRESS**

(NODE-ID=59)


**TENS**  
(1+4=5)

**UNITS**  
(1+8=9)

**NODE-ID TENS  
VALUE**

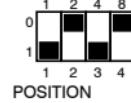

**NODE-ID UNITS  
VALUE**

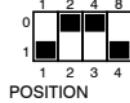

**Caution**


The DIP switches must be moved by completing the movement to the end stop.



## CONFIGURATION FILES

Vendor_Name	"Pneumax"
Model_Name	"PROFIBUS"
Revision	"Version 1"
Ident_Number	0x04E9
Protocol_Ident	0
Station_Type	0
FMS_supp	0
Hardware_Release	"1.00"
Software_Release	"1.00"
Bitmap_Device	"PNSER3K"
Module	"64 OUT" 0x27,0x00
Module	"64 OUT + 8 IN" 0x27,0x10
Module	"64 OUT + 16 IN" 0x27,0x11
Module	"64 OUT + 24 IN" 0x27,0x12
Module	"64 OUT + 32 IN" 0x27,0x13
Module	"64 OUT + 40 IN" 0x27,0x14
Module	"64 OUT + 48 IN" 0x27,0x15
Module	"64 OUT + 56 IN" 0x27,0x16
Module	"64 OUT + 64 IN" 0x27,0x17

## LED STATUS INDICATORS

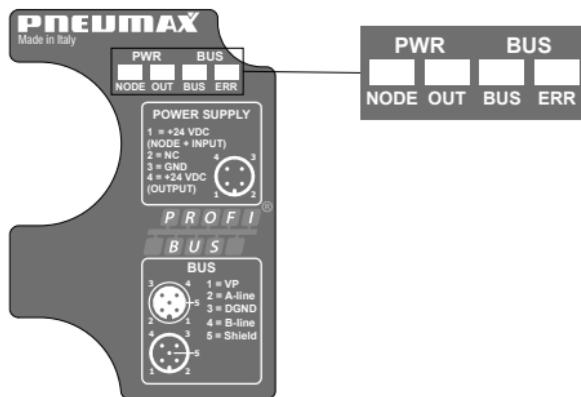

### POWER STATUS LED

NODE	STATUS	COLOUR	MEANING
	OFF		No power supply 24V DC logics and inputs
	ON		Presence of +24V DC power supply, logic and inputs
OUT		<b>MEANING</b>	
	OFF		No power supply 24V DC outputs
	ON		Presence of 24V DC power supply outputs

### BUS COMMUNICATION STATUS LED

BUS	STATUS	COLOUR	MEANING
	OFF		
	ON		OPERATIONAL DATA EXCHANGE status
ERR	STATUS	COLOUR	MEANING
	OFF		Communication in progress
	ON		No communication in progress



### 5.1.2.5 Technical Data

#### Mechanical Technical Data

DESCRIPTION	K5327.64.xxPB
Dimensions	114,5x51x52
Weight	371,50g
Body material	Aluminum
Operating temperature	-5°C÷50°C
Storage temperature	-5°C÷50°C
Degree of protection	IP65 (when mounted)


#### Electrical Technical Data

DESCRIPTION	K5327.64.xxPB
Power supply	Supply voltage
	Node power consumption only (on +24V DC logic and inputs)
	Reverse polarity protection
	Maximum Altitude
Communication	Available bus speeds
	Possible addresses
	Addressing data space
	Configuration Files
EV Outputs	Maximum current per EV output
	Short circuit protection
	Reverse blow protection

## 5.1.3 Profinet IO RT Interface

The PROFINET IO RT interface manages 128 bits on the input data and 128 bits on the output data, of which 48 bits are allocated to the valve seats only (hereafter abbreviated 'EV').

### 5.1.3.1 Product Identification

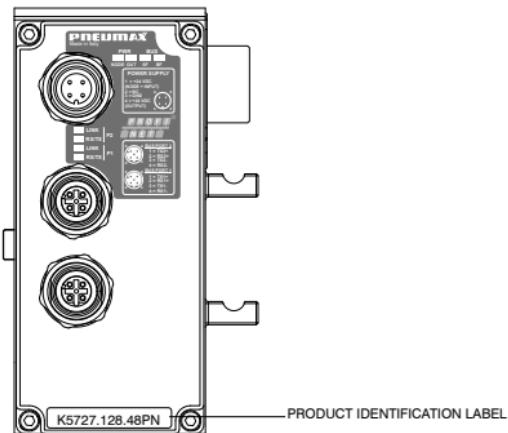

## COMPATIBILITY

	OPTYMA - S EVO	2700 EVO
K5727.128.48PN	●	●

### 5.1.3.2 Specific safety warnings


All safety warnings given in the ['Safety Warnings'](#) section apply.

In addition:

- Accidental or improper operation of the product can cause failure or malfunctioning of the entire system.



### 5.1.3.3 Product Overview

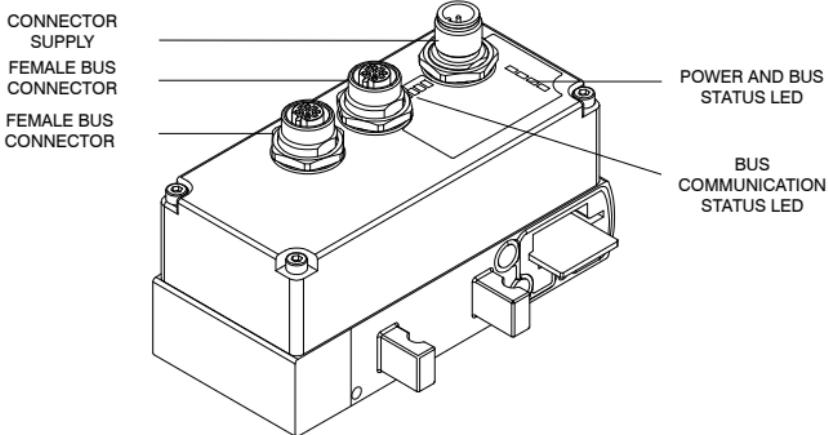


#### Byte Distribution

The PROFINET IO RT node handles up to 128 bits of inputs and outputs with a fixed configuration of the number of inputs and outputs (16 bytes), regardless of how many are actually used. Consequently, only those associated with inputs and outputs physically connected to the node should be considered as useful data.


E.g.

K5727.128.48PN      6 Bytes (from byte 0 to byte 5) always allocated to the valve positions even if not used the first byte available for the output accessory modules will be byte 6 up to a grand total of 10 bytes while for the input accessory modules the first byte will be byte 0 up to a grand total of 16 bytes allocated.

## Input and output data distribution with PROFINET IO RT interface K5727.128.48PN

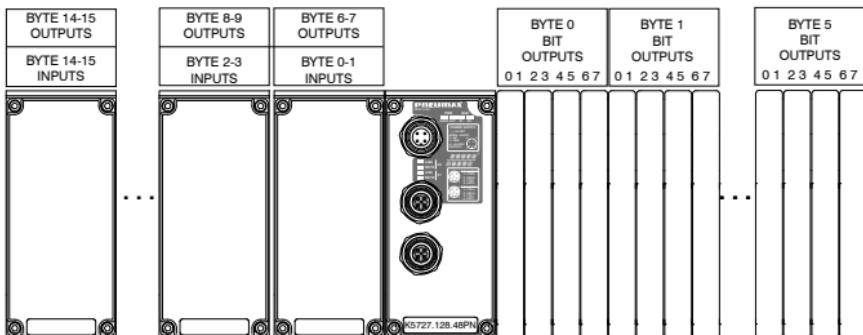

## Example of input and output data distribution with PROFINET IO RT interface K5727.128.48PN

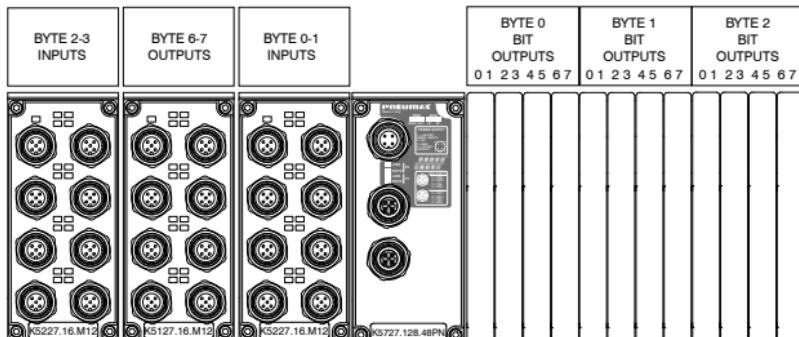

## Configuration

Regardless of the number of connected input modules, the following configuration must be declared:

SLOT 1: 16 Bytes Out  
SLOT 2: 16 Bytes In

## Factory setting

Device Name: "Series3000pns"

Ip Address: 0.0.0.0

From the dedicated Web Page, it is possible to view and modify certain node parameters.  
For more information see '[Web Page](#)' paragraph.



- Signal Connections**

The PROFINET IO RT interface is equipped with two M12 D-coding, 4-pin female ports for connection to the network.

M12 D-coding 4P  
FEMALE



PIN	SIGNAL	DESCRIPTION
1	TX+	Ethernet Transmit High
2	RX +	Ethernet Receive High
3	TX -	Ethernet Transmit Low
4	RX -	Ethernet Receive Low
Threading	SHIELD	

The two doors are equipped with automatic crossover recognition feature.

The cables to be used must be CAT 5 or higher; industrial Ethernet fieldbus cables with shielded connectors are recommended.

- Electrical Connections**

M12 A-coding 4P  
MALE



PIN	SIGNAL	CORRENTE MAX
1	+24V DC (LOGIC AND INPUTS)	4 A
2	N.C.	-
3	0V DC	4 A
4	+24V DC (OUTPUTS)	4 A
Threading	F.E.	-

#### 5.1.3.4 Installation and Commissioning

- Cable connection

The cable connectors to be used are shown in the annex '[Cable and Connector Counterparts](#)'. However, other connectors with equivalent specifications can be used.

**Caution**

Always observe the tightening torques given in the table under '[Tightening torques](#)'.

 If a connector is not used, to ensure IP65 protection, the appropriate plug Code 5300. T12 must be installed with a tightening torque as indicated in the table at '[Tightening torques](#)'.

**CONFIGURATION FILES****Overview**

Vendor	Pneumax S.p.A.
Vendor ID	0x04E9
Main family	I/O
Product family	PNS
Device ID	0x3000
Information	PROFINET IO-Device

**Device Access Point ID=DIM 31: PNX Serie 3000 PNS**

Module Ident Number	0x00003011
PNIO Version	V2.34
Information	Serie 3000 Profinet IO
Vendor Name	Pneumax S.p.A.
Order Number	5730.128.xxPN
Hardware Version	1
Software Version	V1.0.0

**Certification Info**

Conformance Class	C
Application Class	
Netload Class	II
Maximum Input Length	1440 Bytes
Maximum Output Length	1440 Bytes
Application Length Includes IOxS	No
Physical Slots	0..32
Minimum Device Interval	0.25 ms
Based on	Pneumax
DNS Compliant Name	serie3000pns
Fixed in Slots	0
Instance Field of the Object UUID	1
Supports Multiple Write	Yes



Requires IOPS/IOCS	Yes
IP Address Assignment Methods	DCP
Remote Application Timeout	300 s
Maximum Supported Record Size	4068 Bytes
Power on to Communication Ready	500 ms
Parameterization Speedup Supported	No
Name of Station not Transferable	Yes
Shared Device Supported	Yes
Shared Input Supported	No
Device Access Supported	Yes
Number of DeviceAccess AR	1
Auto Configuration Supported	No
CiR Supported	No
PrmBeginPrmEndSequenceSupported	No
LLDP_NoD_Supported	Yes
Reset to Factory Modes	2
IO Supervisor Supported	No
Check Device ID Allowed	Yes
PROFInergyASE Supported	No
Adapts RealIdentification	No
<b>Names for Subslots</b>	
Subslot Number	Subslot Label
32768 (0x8000)	X1
32770 (0x8002)	X1 P2
32769 (0x8001)	X1 P1
<b>Submodule ID=DIM 31: PNX Serie 3000 PNS</b>	
Submodule Ident Number	0x00003010
Information	Serie 3000 Profinet IO
Category	Device Access Point Modules
Writeable I&M Records	1 2 3
I&M 5 Supported	No

Interface ID=DIM 31 Interfacesubmodule: PN-IO	
Submodule Ident Number	0x00003011
Subslot Number	32768 (0x8000)
Supports Realtime Class	Class1
Supports Realtime Classes	RT_CLASS_1;RT_CLASS_3
Supports Isochronous Mode	No
Supported Protocols	SNMP;LLDP
Supports Network Component Diagnosis	No
DCP_Hello Supported	Yes
PTP Boundary Supported	Yes
DCP Boundary Supported	Yes
Multicast Boundary Supported	No
I&M 5 Supported	No
Uses Static ARP Cache Entries	No
Parameterization Disallowed	No
Delay Measurement Supported	Yes
Maximum Frame Start Time	1600 ns
Minimum NRT Gap	960 ns
PDEV Combined Object Supported	No
Startup Mode for RT_CLASS_3	Advanced;Legacy
Forwarding Mode	Relative
Maximum Bridge Delay	5500 ns
Max DFP Frames	0
Align DFP Subframes	No
Maximum Number of IR-Frame Data	256
Maximum Range IR Frame ID	1024
MaxRedPeriodLength	3875 $\mu$ s
Minimum frame send offset	5000 ns
Minimum RTC3 Gap	1120 ns
Minimum Yellow Time	9600 ns
Yellow Safety Margin	160 ns



<b>Interface ID=DIM 31 Interfacesubmodule: PN-IO</b>	
DFP Outbound Truncation Supported	No
DFP Redundant Path Layout Supported	No
Maximum Retention Time	20000 ns
Supported Sync Role	SyncSlave
T_PLL_MAX	1000 ns
Supported Synchronisation Protocols	PTCP
Peer To Peer Jitter	1000 ns
Startup Mode for RT_CLASS_1 and RT_CLASS_2	Advanced;Legacy
Number of Additional Input CRs	0
Number of Additional Output CRs	0
Number of Additional Multicast Provider CRs	0
Number of Multicast Consumer CRs	0
Pull Module Alarm Supported	No
Number of Application Relationships	2
Supported Sendclock Factors (Base 31.25 µs)	32 64 128
Supported Reduction Ratios	1 2 4 8 16 32 64 128 256 512
Supported RT Class 3 Sendclock Factors (Base 31.25 µs)	8 16 32 64 128
Supported RT Class 3 Reduction Ratios	1 2 4 8 16
Maximum RT Class 3 Red. Ratio in Isochronic Mode	1
Supported Role	Client
Maximum MRP Instances	1
MRPD Supported	No
MRT Supported	No
Additional Protocols Supported	No
Additional Forwarding Rules Supported	No
<b>Port ID=DIM 31 Portsubmodule 1: Port 1</b>	
Submodule Ident Number	0x00003012
Subslot Number	32769 (0x8001)
MaxPortTxDelay	116 ns

MaxPortRxDelay	220 ns		
<b>Port ID=DIM 31 Portsubmodule 1: Port 1</b>			
Port Deactivation Supported	Yes		
Link State Diagnosis Capability	Up+Down		
Is Default Ringport	Yes		
Parameterization Disallowed	No		
I&M 5 Supported	No		
CheckMAUType Supported	Yes		
CheckMAUTypeDifference Supported	Yes		
MAUTypeList			
Value	MAUType	Extension	AdjustSupported
16	100BaseTxFD	none	Yes
<b>Port ID=DIM 31 Portsubmodule 2: Port 2</b>			
Submodule Ident Number	0x00003013		
Subslot Number	32770 (0x8002)		
MaxPortTxDelay	116 ns		
MaxPortRxDelay	220 ns		
Port Deactivation Supported	Yes		
Link State Diagnosis Capability	Up+Down		
Is Default Ringport	Yes		
Parameterization Disallowed	No		
I&M 5 Supported	No		
CheckMAUType Supported	Yes		
CheckMAUTypeDifference Supported	Yes		
MAUTypeList			
Value	MAUType	Extension	AdjustSupported
16	100BaseTxFD	none	Yes




<b>Useable Modules</b>					
Module ID	Name	Information	Allowed in Slots	Used in Slots	Fixed in Slots
16byteinput	16 Bytes Input	16 Bytes Input Module			1
16byteoutput	16 Bytes Output	16 Bytes Output Module			2

<b>Module ID=16byteinput: 16 Bytes Input</b>			
Module Ident Number	0x00000001		
Information	16 Bytes Input Module		
Category	Input Modules		
<b>Submodule ID=16byteinput: 16 Bytes Input</b>			
Submodule Ident Number	0x00000001		
Information	16 Bytes Input Submodule		
I&M 5 Supported	No		
Cyclic Input Data			
Name	Data Type	Display as Bits	Subordinate
Inputs	OctetString	No	No

<b>Module ID=16byteoutput: 16 Bytes Output</b>			
Module Ident Number	0x00000002		
Information	16 Bytes Output Module		
Category	Output Modules		
<b>Submodule ID=16byteoutput: 16 Bytes Output</b>			
Submodule Ident Number	0x00000001		
Information	16 Byte Output Submodule		
I&M 5 Supported	No		
Cyclic Output Data			
Name	Data Type	Display as Bits	Subordinate
Outputs	OctetString	No	No

## LED STATUS INDICATORS

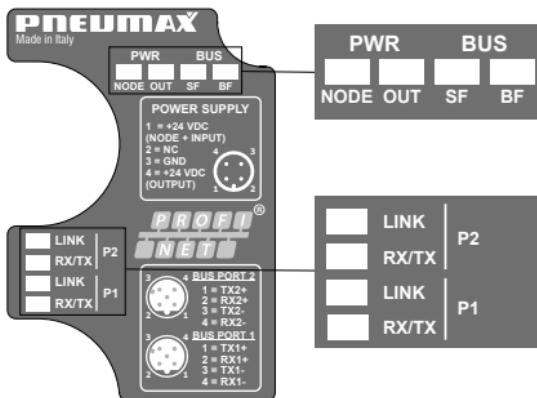

## POWER STATUS LED

NODE	STATUS	COLOUR	MEANING
OFF	ON	GREEN	No power supply 24V DC logics and inputs
ON			Presence of +24V DC power supply, logic and inputs
OUT	MEANING		
OFF	ON	GREEN	No power supply 24V DC outputs
ON			Presence of 24V DC power supply outputs

## BUS COMMUNICATION STATUS LED

SF	STATUS	COLOUR	MEANING
OFF	FLASHING (1Hz, 3s)	RED	No error
FLASHING (1Hz, 3s)			DCP signalling service is transmitted via bus
ON			Watchdog timeout, system error
BF	MEANING		
OFF	FLASHING (2 Hz)	RED	No error
FLASHING (2 Hz)			No data exchange
ON			No configuration, low transmission speed, non-existent connection



## NETWORK COMMUNICATION STATUS LED

LINK	STATUS	COLOUR	MEANING
	OFF	GREEN	The device is not connected to the PROFINET IO RT network
	ON		The device is connected to the PROFINET IO RT network
RX/TX	STATUS	COLOUR	MEANING
	OFF	YELLOW	Device does not send/receive PROFINET IO RT messages
	FLICKERING		The device sends/receives messages PROFINET IO RT

LED STATUS		DESCRIPTION
LED FLASHING (1 Hz, 3 s)		The LED switches on and off for 3 seconds at a frequency of 1 Hz : ON for 500ms and OFF for 500ms.
LED FLASHING (2 Hz)		The LED switches on and off with a frequency of 2 Hz : ON for 250ms and OFF for 250ms.
LED FLICKERING		The LED switches on and off at an approximate frequency of 10 Hz to indicate high network activity : ON for approximately 50 ms, and OFF for approximately 50 ms. The LED switches on and off at irregular intervals to indicate low network activity.

### 5.1.3.5 Technical Data

#### Mechanical Technical Data

DESCRIPTION		K5727.128.48PN
Dimensions		114,5x51x52
Weight		371,50g
Body material		Aluminum
Operating temperature		-5°C ÷ 50°C
Storage temperature		-5°C ÷ 50°C
Degree of protection		IP65 (when mounted)

#### Electrical Technical Data


DESCRIPTION		K5727.128.48PN
Power supply	Supply voltage	+24V DC ±10%
	Node power consumption only (on +24V DC logic and inputs)	65mA
	Reverse polarity protection	si
	Maximum Altitude	2000m s.l.m.
Communication	Transmission speed	100Mbit/s
	Maximum distance between 2 nodes	100m
	Addressing data space	16 byte inputs / 16 byte outputs
	Configuration support	GSDML files
EV Outputs	Maximum current per EV output	100mA
	Short circuit protection	yes
	Reverse blow protection	yes



## 5.1.4 EtherCAT® Interface

The EtherCAT® node handles 128 bits on the input data and 128 bits on the output data, of which 48 bits are allocated to the valve seats only (hereafter abbreviated as 'EV').

### 5.1.4.1 Product Identification

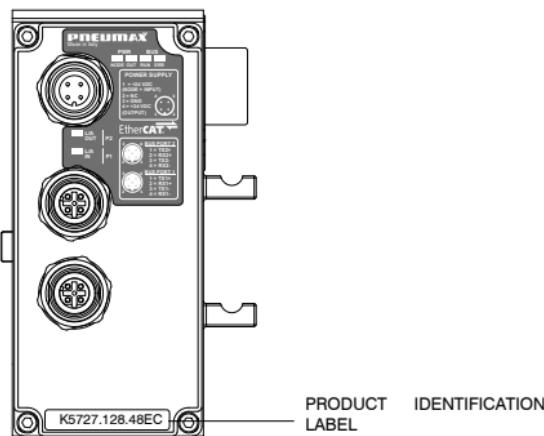

### COMPATIBILITY

	OPTYMA - S EVO	2700 EVO
K5727.128.48EC	●	●


### 5.1.4.2 Specific safety warnings

All safety warnings given in the '[Safety Warnings](#)' section apply.

In addition:

- Accidental or improper operation of the product can cause failure or malfunctioning of the entire system.

### 5.1.4.3 Product Overview

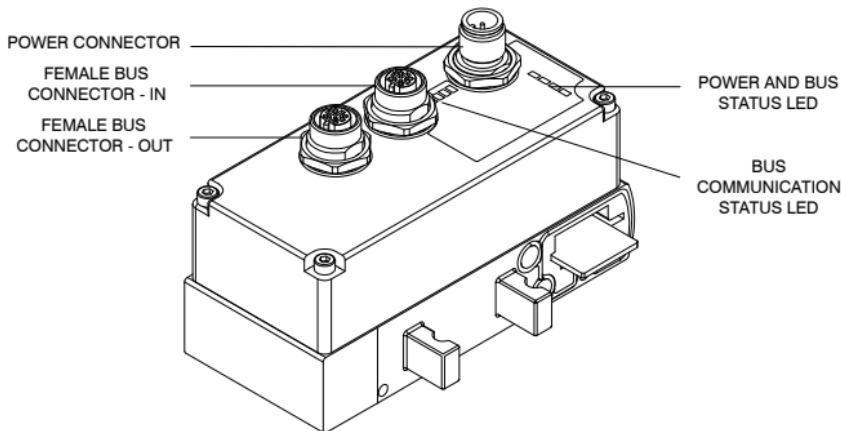

### Byte Distribution

The EtherCAT® node handles up to 128 bits of inputs and outputs with a fixed configuration of the number of inputs and outputs (16 bytes), regardless of how many are actually used. Consequently, only those associated with inputs and outputs physically connected to the node should be considered as useful data.


E.g.

K5727.128.48EC


6 Bytes (from byte 0 to byte 5) always allocated to the valve positions even if not used the first byte available for the output accessory modules will be byte 6 up to a grand total of 10 bytes while for the input accessory modules the first byte will be byte 0 up to a grand total of 16 bytes allocated.



## Input and output data distribution with EtherCAT® interface K5727.128.48EC

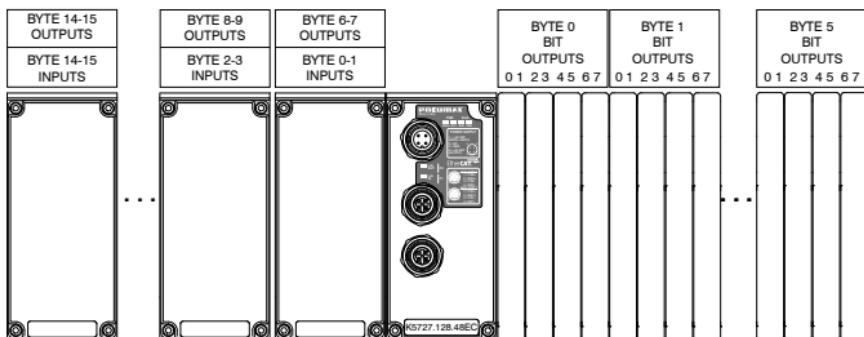

## Example of input and output data distribution with EtherCAT® interface K5727.128.48EC

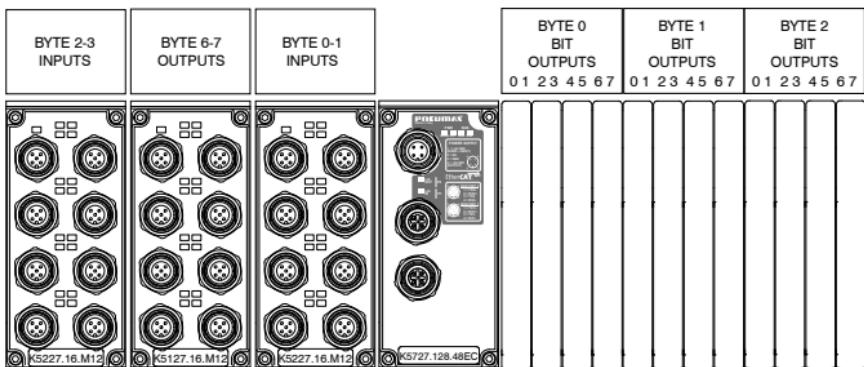

## Configuration

Regardless of the number of connected input modules, the following configuration must be declared: 16 Bytes Out + 16 Bytes In

## • Signal Connections

The EtherCAT® interface is equipped with two M12 D-coding, female 4-pole ports for connection to the network.

M12 D-coding 4P  
FEMALE




PIN	SIGNAL	DESCRIPTION
1	TX+	EtherCAT Transmit High
2	RX +	EtherCAT Receive High
3	TX -	EtherCAT Transmit Low
4	RX -	EtherCAT Receive Low
THREADING	SHIELD	

The two doors are equipped with automatic crossover recognition feature.

The cables to be used must be CAT 5 or higher; industrial Ethernet fieldbus cables with shielded connectors are recommended.

## • Electrical Connections

M12 A-coding 4P  
MALE

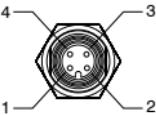

PIN	SIGNAL	CORRENTE MAX
1	+24V DC (LOGIC AND INPUTS)	4 A
2	N.C.	-
3	0V DC	4 A
4	+24V DC (OUTPUTS)	4 A
THREADING	F.E.	

### 5.1.4.4 Installation and Commissioning

The device has an integrated switch, so it can also be used in networks with lines or for ring topology

- **Cable connection**  
The cable connectors to be used are shown in the annex '[Cable and Connector Counterparts](#)'. However, other connectors with equivalent specifications can be used.

#### Caution

Always observe the tightening torques given in the table under '[Tightening torques](#)'.



If a connector is not used, to ensure IP65 protection, the appropriate plug Code 5300. T12 must be installed with a tightening torque as indicated in the table at '[Tightening torques](#)'.




## CONFIGURATION FILE

<b>Index (hex)</b>	<b>Subindex (hex)</b>	<b>Register Name</b>	<b>Type</b>	<b>Access</b>
1000	00	Device Type	4	RO
1008	00	Manufacturer Device Name	STRING	RO
1009	00	Manufacturer Hardware Version	STRING	RO
100A	00	Manufacturer Software Version	STRING	RO
1018	00	Identity Object		
PT1018	01	Vendor ID	4	RO
	02	Product Code	4	RO
	03	Revision Number	4	RO
	04	Serial Number	4	RO
10F8	00	Timestamp Object	8	RO
1600	00	1. RXPDO		
2000	01	Out Byte 1	1	RW
	02	Out Byte 2	1	RW
	03	Out Byte 3	1	RW
	04	Out Byte 4	1	RW
	05	Out Byte 5	1	RW
	06	Out Byte 6	1	RW
	07	Out Byte 7	1	RW
	08	Out Byte 8	1	RW
	09	Out Byte 9	1	RW
	0A	Out Byte 10	1	RW
	0B	Out Byte 11	1	RW
	0C	Out Byte 12	1	RW
	0D	Out Byte 13	1	RW
	0E	Out Byte 14	1	RW
	0F	Out Byte 15	1	RW
	10	Out Byte 16	1	RW

Index (hex)	Subindex (hex)	Register Name	Type	Access
1A00	00	1. TXPDO		
3000	01	In Byte 1	1	RW
	02	In Byte 2	1	RW
	03	In Byte 3	1	RW
	04	In Byte 4	1	RW
	05	In Byte 5	1	RW
	06	In Byte 6	1	RW
	07	In Byte 7	1	RW
	08	In Byte 8	1	RW
	09	In Byte 9	1	RW
	0A	In Byte 10	1	RW
	0B	In Byte 11	1	RW
	0C	In Byte 12	1	RW
	0D	In Byte 13	1	RW
	0E	In Byte 14	1	RW
	0F	In Byte 15	1	RW
	10	In Byte 16	1	RW



## LED STATUS INDICATORS

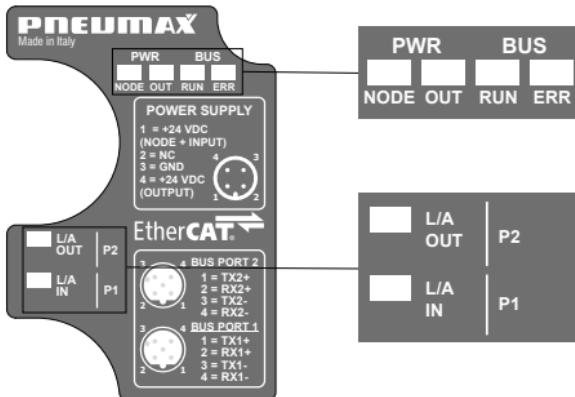

### POWER STATUS LED

NODE	STATUS	COLOUR	MEANING
	OFF	GREEN	No power supply 24V DC logics and inputs
	ON		Presence of +24V DC power supply, logic and inputs
OUT	MEANING		
	OFF	GREEN	No power supply 24V DC outputs
	ON		Presence of 24V DC power supply outputs

### BUS COMMUNICATION STATUS LED

RUN	STATO	COLOUR	MEANING
	OFF	GREEN	INIT status or device OFF
	BLINKING		PRE-OPERATIONAL status
	SINGLE FLASH		SAFE-OPERATIONAL status
	ON		OPERATIONAL Status

ERR	STATUS	COLOUR	MEANING
	OFF	RED	No error
	BLINKING (2.5 Hz)		Invalid configuration
	SINGLE FLASH		Local error
	DOUBLE FLASH		Watchdog timeout

### NETWORK COMMUNICATION STATUS LED

L/A OUT	STATUS	COLOUR	MEANING
	OFF	GREEN	The device does not send EtherCAT messages
	ON		Device is connected but does not send EtherCAT messages
	FLICKERING		The device sends EtherCAT messages
L/A IN	STATUS	MEANING	
	OFF	GREEN	The device does not receive EtherCAT messages
	ON		Device is connected but not receiving EtherCAT messages
	FLICKERING		The device receives EtherCAT messages

LED STATUS		DESCRIPTION
LED BLINKING		The LED switches on and off with a frequency of 2.5 Hz : ON for 200ms and OFF for 200ms.
LED SINGLE FLASH		The LED lights up for 200ms and goes out for 1s
LED DOUBLE FLASH		The LED lights up twice for 200ms interspersed with a short switch-off of 200ms, the sequence ends with a long switch-off of 1s
LED FLICKERING		The LED switches on and off at an approximate frequency of 10 Hz to indicate high network activity : ON for about 50ms, and OFF for about 50ms. The LED switches on and off at irregular intervals to indicate low network activity.



## 5.1.4.5 Technical Data

### Mechanical Technical Data

DESCRIPTION		K5727.128.48EC
Dimensions		114,5x51x52
Weight		371,50g
Body material		Aluminum
Operating temperature		-5°C÷50°C
Storage temperature		-5°C÷50°C
Degree of protection		IP65 (when mounted)

### Electrical Technical Data


DESCRIPTION		K5727.128.48EC
Power supply	Supply voltage	+24V DC ±10%
	Node power consumption only (on +24V DC logic and inputs)	65mA
	Reverse polarity protection	sì
	Maximum Altitude	2000m s.l.m.
Communication	Transmission speed	100Mbit/s
	Maximum distance between 2 nodes	100m
	Addressing data space	16 byte inputs / 16 byte outputs
	Configuration support	XML files
EV Outputs	Maximum current per EV output	100mA
	Short circuit protection	yes
	Reverse blow protection	yes



## 5.1.5 CC-LINK IE Field Basic Interface

The CC-Link IE Field Basic node handles 128 bits on the input data and 128 bits on the output data, of which 48 bits are allocated to the valve seats only (hereafter abbreviated as 'EV').

### 5.1.5.1 Product Identification

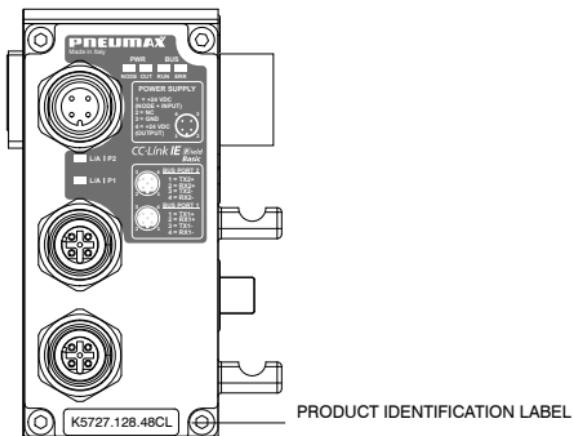

## COMPATIBILITY

	OPTYMA - S EVO	2700 EVO
K5727.128.48CL	●	●
OPTYMA - S EVO	●	●

### 5.1.5.2 Specific safety warnings


All safety warnings given in the '[Safety Warnings](#)' section apply.

In addition:

- Accidental or improper operation of the product can cause failure or malfunctioning of the entire system.



### 5.1.5.3 Product Overview

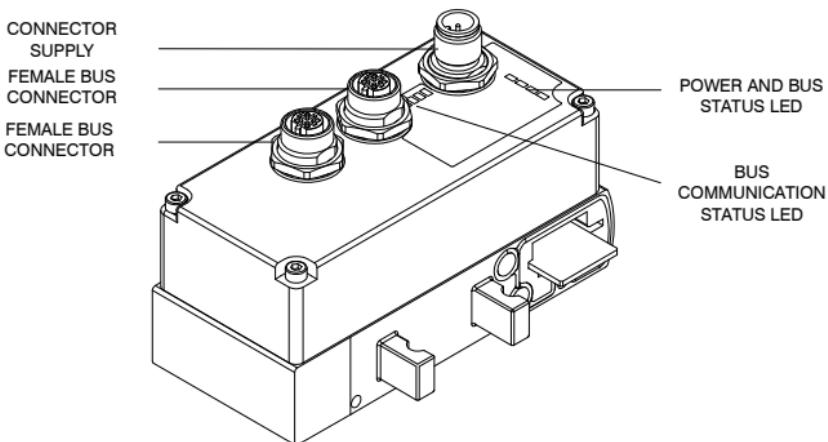

### Byte Distribution

The CC-Link IE Field Basic node handles up to 128 bits of inputs and outputs with a fixed configuration of the number of inputs and outputs (16 bytes), regardless of how many are actually used.


Consequently, only those associated with inputs and outputs physically connected to the node should be considered as useful data.

E.g.


K5727.128.48CL

6 Bytes (from byte 0 to byte 5) always allocated to the valve positions even if not used the first byte available for the output accessory modules will be byte 6 up to a grand total of 10 bytes while for the input accessory modules the first byte will be byte 0 up to a grand total of 16 bytes allocated.

## Input and output data distribution with CC-Link IE Field Basic interface K5727.128.48CL

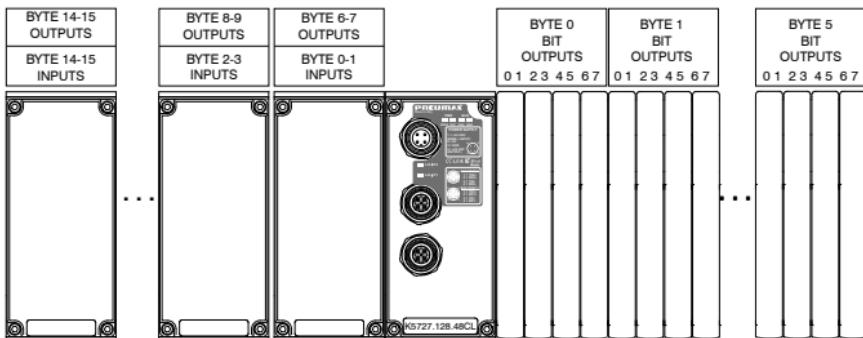

Example of input and output data distribution with CC-Link IE Field Basic interface K5727.128.48CL

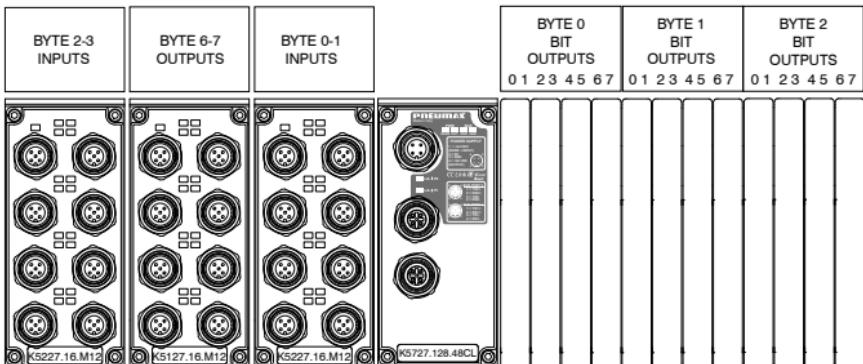

## Configuration

The device handles 16 Bytes Out + 16 Bytes In.

During configuration, select 1 Occupied Station.

As a factory setting, the address of each IP node 192.168.10.4

From the dedicated Web Page, it is possible to view and modify certain node parameters. For more information see '[Web Page](#)' paragraph.



- Signal Connections**

The CC-Link IE Field Basic interface is equipped with two M12 D-coding, 4-pin female ports for network connection.

M12 D-coding 4P  
FEMALE




PIN	SIGNAL	DESCRIPTION
1	TX+	Ethernet Transmit High
2	RX +	Ethernet Receive High
3	TX -	Ethernet Transmit Low
4	RX -	Ethernet Receive Low
THREADING	SHIELD	

The two doors are equipped with automatic crossover recognition feature.

The cables to be used must be CAT 5 or higher; industrial Ethernet fieldbus cables with shielded connectors are recommended.

- Electrical Connections**

M12 A-coding 4P  
MALE

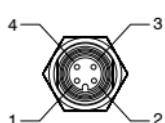

PIN	SIGNAL	MAX CURRENT
1	+24V DC (LOGIC AND INPUTS)	4 A
2	N.C.	-
3	0V DC	4 A
4	+24V DC (OUTPUTS)	4 A
THREADING	F.E.	

### 5.1.5.4 Installation and Commissioning

The device has an integrated switch, so it can also be used in networks with lines or for ring topology

- Cable connection

The cable connectors to be used are shown in the annex '[Cable and Connector Counterparts](#)'. However, other connectors with equivalent specifications can be used.



#### Caution

Always observe the tightening torques given in the table under "[Tightening torques](#)".

If a connector is not used, to ensure IP65 protection, the appropriate plug Code 5300. T12 must be installed with a tightening torque as indicated in the table at "[Tightening torques](#)".

## CONFIGURATION FILE

LABEL	LABEL 2	CATEGORY	NAME	DATA TYPE	DATA
FileSection		File Section			
CreateDate	CreateDate	COMMON	File creation date	STRING(10)	2024/02/26
CreateTime	CreateTime	COMMON	File creation time	STRING(8)	12:19:00
ModDate	ModDate	COMMON	Last update date	STRING(10)	2024/02/26
ModTime	ModTime	COMMON	Last update time	STRING(8)	12:19:00
Language	Language	COMMON	Supported language	STRING(12)	en
FileVersion	FileVersion	COMMON	File version	STRING(32)	1.0
CCLinkFamilyProfile-Version	CCLinkFamilyProfile-Version	COMMON	CSP+ specification version	STRING(32)	2.2
Device Section					
VendorName	VendorName	COMMON	Vendor name	STRIN-G_U(64)	Pneumax Spa



LABEL	LABEL 2	CATEGORY	NAME	DATA TYPE	DATA
VendorCode	VendorCode	COMMON	Vendor code	WORD	0x3622
DeviceModel	DeviceModel	COMMON	Device model	STRING(48)	Serie 3000 CLS
ProductID	ProductID	COMMON	Product ID	STRING(256)	0x00000BB8
DeviceTypeID	DeviceTypeID	COMMON	Device type ID	WORD	0x0001
DeviceTypeDetail	DeviceTypeDetail	COMMON	Device type detail	STRING_U(256)	Digital I/O
Version	Version	COMMON	Device version	WORD	0x0001
VersionDisplayFlg	VersionDisplayFlg	COMMON	Device version display flag	BOOL	0
VersionPolicyType	VersionPolicyType	COMMON	Device version policy type	UINT16	0
DisplayVersionValue	DisplayVersionValue	COMMON	Device version displayed	STRING(32)	1
ReferenceURL	ReferenceURL	COMMON	Reference URL	STRING_U(1024)	<a href="https://pneumaxspa.com/">https://pneumaxspa.com/</a>
IconFileName	IconFileName	COMMON	Icon file name	STRING(52)	serie_3000.ico
CommIfSection					
VendorName	VendorName	COMMON	Vendor name	STRING_U(64)	Pneumax Spa
VendorCode	VendorCode	COMMON	Vendor code	WORD	0x3622
CommIFTypID	CommIFTypID	COMMON	Communication Interface Type ID	STRING(32)	Ethernet
Version	Version	COMMON	Version	WORD	0x0001
ReadVersionType	ReadVersionType	COMMON	Read device version type	STRING(128)	MachineVersion
SupportIPAddress-Size	SupportIPAddress-Size	COMMON_Ethernet	Support IP Address Size	UINT16()	4
TimeOutValue	TimeOutValue	COMMON_Ethernet	TimeOutValue	UINT16	1500

LABEL	LABEL 2	CATEGORY	NAME	DATA TYPE	DATA
SupportFlg_Search-Node	SupportFlg_Search-Node	COMMON_Ethernet	Support Flag SearchNode	BOOL	1
SupportFlg_SetIPAddress	SupportFlg_SetIPAddress	COMMON_Ethernet	Support Flag SetIPAddress	BOOL	1
SupportFlg_CompareDeviceInfo	SupportFlg_CompareDeviceInfo	COMMON_Ethernet	Support Flag CompareDeviceInfo	BOOL	1
SupportFlg_GetParam	SupportFlg_GetParam	COMMON_Ethernet	Support Flag GetParam	BOOL	1
SupportFlg_SetParam	SupportFlg_SetParam	COMMON_Ethernet	Support Flag SetParam	BOOL	1
SupportFlg_Start-SetParam	SupportFlg_Start-SetParam	COMMON_Ethernet	Support Flag StartSetParam	BOOL	1
SupportFlg_End-SetParam	SupportFlg_End-SetParam	COMMON_Ethernet	Support Flag EndSetParam	BOOL	1
SupportFlg_Cancel-SetParam	SupportFlg_Cancel-SetParam	COMMON_Ethernet	Support Flag CancelSetParam	BOOL	1
SupportFlg_Read-Status	SupportFlg_ReadStatus	COMMON_Ethernet	Support Flag ReadStatus	BOOL	1
SupportFlg_GetCommSetting	SupportFlg_GetCommSetting	COMMON_Ethernet	Support Flag GetCommSetting	BOOL	1
SupportFlg_Read-Status2	SupportFlg_Read-Status2	COMMON_Ethernet	Support Flag ReadStatus2	BOOL	1
DevModel	ModelName	COMMON_Ethernet	ModelName (TypeName)	STRING(48)	Serie 3000
NumOccupiedStations	NumOccupiedStation	COMMON_Ethernet	Number of occupied station	UINT16	1
CCIEFBasicProtocol-Version	CCIEFBasicProtocol-Version	COMMON_Ethernet	CCIE FBasic Protocol Version	UINT16	2
EthernetCommFunction	EthernetCommunicationFunction	COMMON_Ethernet	Ethernet Communication Function	DWORD	0x00000002




## CommIfInput - CommIfOutput

LABEL	CATEGORY	DATA TYPE	ACCESS	ASSIGN	REF
RX0...RX3F	REMOTE INPUT	BOOL	RF	RX0...RX3F	BlockSection. BlockOutput.RX0... BlockSection. BlockOutput.RX3F
RWr0...RWr1F	REMOTE REGISTER	WORD	RF	RWr0...RWr1F	BlockSection. BlockOutput.RWr0... BlockSection. BlockOutput.RWr1F
RY0...RY3F	REMOTE OUTPUT	BOOL	RF	RY0...RY3F	BlockSection. BlockInput.RY0... BlockSection. BlockInput.RY3F
RWw0...RWw1F	REMOTE REGISTER	WORD	RF	RWw0...RWw1F	BlockSection. BlockInput.RWw0... BlockSection. BlockInput.RWw1F

LABEL	LABEL 2	CATEGORY	NAME	DATA TYPE	DATA
BlockSection					
VendorName	VendorNa-me	COMMON	Vendor name	STRIN-G_U(64)	Pneumax Spa
VendorCode	VendorCode	COMMON	Vendor code	WORD	0x3622
Version	Version	COMMON	Device version	STRING(32)	1.0.0.0
BlockInput					
RY0...RY3F		REMOTE_OUTPUT	RY0...RY3F	BOOL	
RWw0...RWw1F		REMOTE_REGISTER	RWw0...RWw1F	WORD	
RX0...RX3F		REMOTE_INPUT	RX0...RX3F	BOOL	
RWr0...RWr1F		REMOTE_REGISTER	RWr0...RWr1F	WORD	

## LED STATUS INDICATORS

The CC-Link IE Field Basic network node has four LEDs indicating the status of the communication ports as shown below:

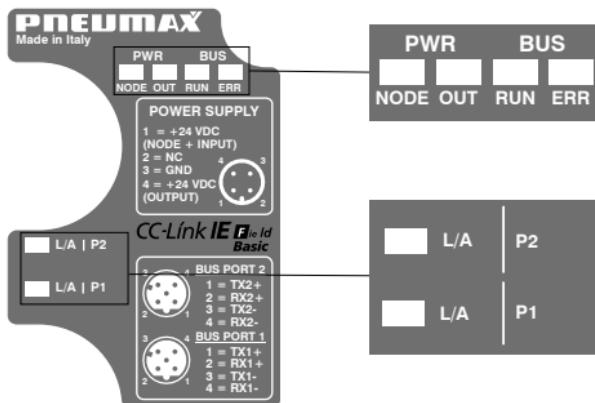

### POWER STATUS LED

NODE	STATUS	COLOUR	MEANING
	OFF	GREEN	No power supply 24V DC logics and inputs
	ON		Presence of +24V DC power supply, logic and inputs
OUT		MEANING	
	OFF	GREEN	No power supply 24V DC outputs
	ON		Presence of 24V DC power supply outputs

**BUS COMMUNICATION STATUS LED**

RUN	STATUS	COLOUR	MEANING
	OFF	GREEN	Device disconnected
	BLINKING		Operational device and interrupted cycle transmission
	FLICKERING		Device not configured
	ON		Operating device and cyclic transmission in progress

ERR	STATUS	COLOUR	MEANING
	OFF	RED	Device disconnected
	TRIPLE FLASH		Watchdog DPM expired
	ON		Communication error

**NETWORK COMMUNICATION STATUS LED**

L/A	STATUS	COLOUR	MEANING
	OFF	GREEN	Device does not send/receive CC-Link IE Field Basic messages
	ON		Device is connected but does not send/receive CC-Link IE Field Basic messages
	FLICKERING		Device sends/receives CC-Link IE Field Basic messages

LED STATUS		DESCRIPTION
TRIPLE FLASH LED		The LED shows a sequence of three short flashes (200 ms each), separated by a short 'Off' phase (200 ms). The sequence ends with a long 'Off' phase (1,000 ms).
LED Blinking (2.5 Hz)		The LED switches on and off with a frequency of 2.5 Hz: "On" for 200 ms, followed by "Off" for 200 ms.
LED Flickering (10 Hz)		The LED switches on and off with a frequency of 10 Hz: "On" for 50 ms, followed by "Off" for 50 ms.
LED Flickering		The LED switches on and off at an approximate frequency of 10 Hz to indicate high network activity: ON for about 50ms, and OFF for about 50ms. The LED switches on and off at irregular intervals to indicate low network activity.

## 5.1.5.5 Technical Data

### Mechanical Technical Data

DESCRIPTION	K5727.128.48CL
Dimensions	114,5x51x52
Weight	371,50g
Body material	Aluminum
Operating temperature	-5°C÷50°C
Storage temperature	-5°C÷50°C
Degree of protection	IP65 (when mounted)

### Electrical Technical Data


DESCRIPTION	K5727.128.48CL
Power supply	Supply voltage
	Node power consumption only (on +24V DC logic and inputs)
	Reverse polarity protection
	Maximum Altitude
Communication	Transmission speed
	Maximum distance between 2 nodes
	Addressing data space
	Configuration support
EV Outputs	Maximum current per EV output
	Short circuit protection
	Reverse blow protection



## 5.1.6 EtherNet/IP Interface

The EtherNet/IP node handles 128 bits on the input data and 128 bits on the output data, of which 48 bits are allocated to the valve seats only (hereafter abbreviated as 'EV').

### 5.1.6.1 Product Identification

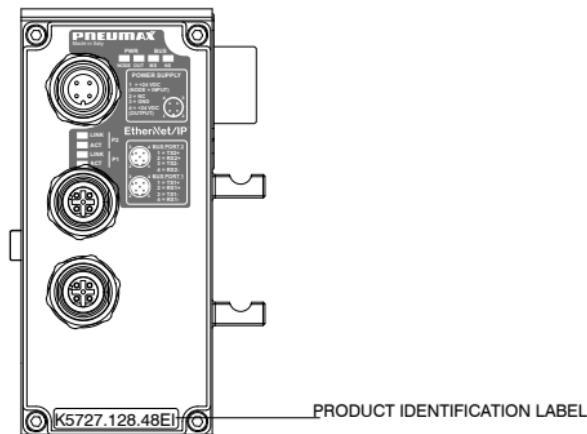

## COMPATIBILITY

	OPTYMA - S EVO	2700 EVO
K5727.128.48E	●	●


### 5.1.6.2 Specific safety warnings

All safety warnings given in the '[Safety Warnings](#)' section apply.

In addition:

- Accidental or improper operation of the product can cause failure or malfunctioning of the entire system.

### 5.1.6.3 Product Overview

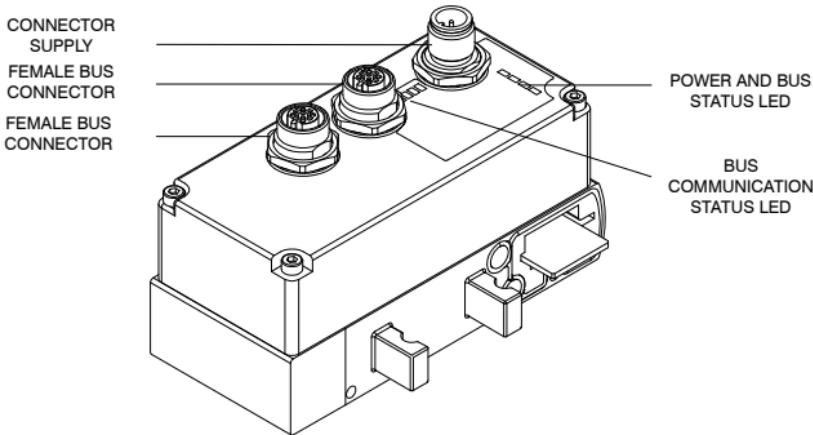

### Byte Distribution


The EtherNet/IP node handles up to 128 bits of inputs and outputs with a fixed configuration of the number of inputs and outputs (16 bytes), regardless of how many are actually used. Consequently, only those associated with inputs and outputs physically connected to the node should be considered as useful data.

E.g.


K5727.128.48EI      6 Bytes (from byte 0 to byte 5) always allocated to the valve positions even if not used the first byte available for the output accessory modules will be byte 6 up to a grand total of 10 bytes while for the input accessory modules the first byte will be byte 0 up to a grand total of 16 bytes allocated.



## Input and output data distribution with EtherNet/IP interface K5727.128.48EI

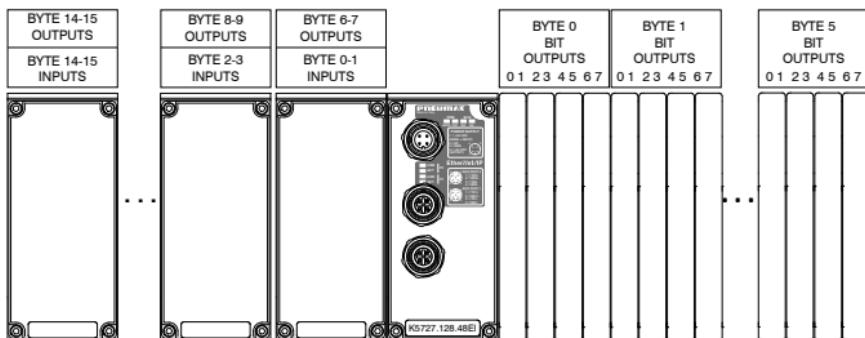

## Example input and output data distribution with EtherNet/IP interface K5727.128.48EI

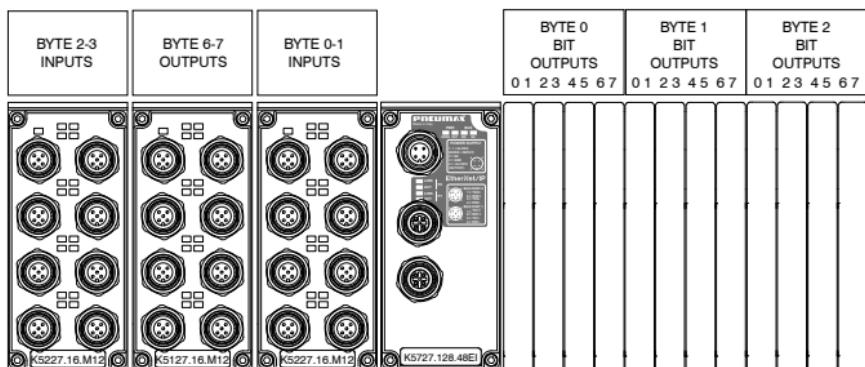

## Configuration

Regardless of the number of connected input modules, the following configuration must be declared: 16 Bytes Out + 16 Bytes In

As a factory setting, the address of each node is 192.168.10.4

From the dedicated Web Page, it is possible to view and modify certain node parameters. For more information see '[Web Page](#)' paragraph.

- Signal Connections**

The EtherNet/IP interface is equipped with two M12 D-coding, 4-pole female ports for connection to the network.

M12 D-coding 4P  
FEMALE




PIN	SIGNAL	DESCRIPTION
1	TX+	Ethernet Transmit High
2	RX +	Ethernet Receive High
3	TX -	Ethernet Transmit Low
4	RX -	Ethernet Receive Low
THREADING	SHIELD	

The two doors are equipped with automatic crossover recognition feature.

The cables to be used must be CAT 5 or higher; industrial Ethernet fieldbus cables with shielded connectors are recommended.

M12 A-coding 4P  
MALE

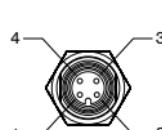

PIN	SIGNAL	MAX CURRENT
1	+24V DC (LOGIC AND INPUTS)	4 A
2	N.C.	-
3	0V DC	4 A
4	+24V DC (OUTPUTS)	4 A
THREADING	F.E.	



### 5.1.6.4 Installation and Commissioning

The device has an integrated switch, so it can also be used in networks with lines or for ring topology

- **Cable connection**

The cable connectors to be used are shown in the annex '[Cable and Connector Counterparts](#)'. However, other connectors with equivalent specifications can be used.



#### Caution

Always observe the tightening torques given in the table under '[Tightening torques](#)'.

If a connector is not used, to ensure IP65 protection, the appropriate plug Code 5300. T12 must be installed with a tightening torque as indicated in the table at '[Tightening torques](#)'.

### CONFIGURATION FILE

File	Value
DescText =	"EDS-File for EtherNet/IP Serie 3000 Pneumatic Valves Manifold"
CreateDate	12-05-2019
CreateTime	10:00:00
ModDate	05-07-2024
ModTime	10:00:00
Revision	1.1
HomeURL	<a href="http://www.pneumaxspa.com">www.pneumaxspa.com</a>
Device	
VendCode	1751
VendName	"PNEUMAX SpA"
ProdType	12
ProdTypeStr	"Communications Adapter"
ProdCode	3000
MajRev	1

File	Value
MinRev	1
ProdName	"PNX_PX_EIS";
Icon	"Pneumax Serie3000 EIS.ico"
Device Classification	
Class1	EtherNetIP
Params	
Param1	0, " 0x0010, 0xC7, 2, "Produced Data", " " " 0,255,0, " " " 0;
Param2	0, " 0x0000, 0xC7, 2, "Consumed Data", " " " 0,255,0, " " " 0;
Assembly	
Object_Name	Assembly Object
Object_Class_Code	0x04




File	Value	
Connection1		
	Trigger and Transport	0x04010002,
	Point Multicast	0x44640405
	Assem100	OT RPI Size format
	Assem101	TO rpi size format
		config 1
		config 2
Connection2	Exclusive Owner	connection name help string
	path	20 04 24 01 2C 64 2C 65
	Trigger and Transport	0x04010002,
	Point Multicast	0x44640405
	0	OT RPI Size format
	Assem101	TO rpi size format
		config 1
		config 2
Capacity	Listen Only	connection name help string
	path	20 04 24 01 2C C0 2C 65
ConnOverhead	Connection Overhead	004
MaxIOConnections	Maximum number of Class 1 Connections	3
MaxMsgConnections	Maximum number of Class 3 Connections	6
TSpec1	packets per sec @ 10 bytes	TxRx, 10, 2000
TSpec2	packets per sec @ 504 byte	TxRx, 504, 1500
TCP/IP Interface Class]		
Revision = 4;		
Object_Name = "	TCP/IP Interface Object";	
Object_Class_Code		0xF5
MaxInst		1



File	Value
Number_Of_Static_Instances	1
Max_Number_Of_Dynamic_Instances	0
Ethernet Link Class	
Revision	4
Object_Name	"Ethernet Link Object"
Object_Class_Code	0xF6;
MaxInst	2
Number_Of_Static_Instances	2
Max_Number_Of_Dynamic_Instances	0
InterfaceLabel1	Port0
InterfaceLabel2	Port1
QoS Class	
Revision	1
Object_Name	QoS Object
Object_Class_Code	0x48;
MaxInst	1
Number_Of_Static_Instances	1
Max_Number_Of_Dynamic_Instances	0

## LED STATUS INDICATORS

The EtherNet/IP network node has four LEDs indicating the status of the communication ports as shown below:

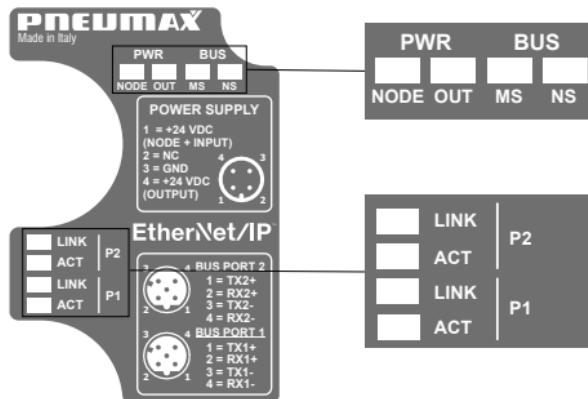

### POWER STATUS LED

NODE	STATUS	COLOUR	MEANING
	OFF		No power supply 24V DC logics and inputs
	ON		Presence of +24V DC power supply, logic and inputs
OUT		<b>MEANING</b>	
	OFF		No power supply 24V DC outputs
	ON		Presence of 24V DC power supply outputs

### BUS COMMUNICATION STATUS LED

MS	STATUS	COLOUR	MEANING
	OFF		The device is switched off
	FLASHING (1 Hz)		Standby : device is not configured
	ON		The device is switched on



MS	STATUS	COLOUR	MEANING
	FLASHING FAST	GREEN / RED	The device performs a self-test after switching on. The following sequence is displayed during the self-test: <ul style="list-style-type: none"><li>• NS LED off</li><li>• MS LED turns green for approx. 250ms, turns red for approx. 250ms and turns green again (maintains this state until completion of the power-up test)</li><li>• NS LED turns green for approx. 250ms, turns red for approx. 250ms and then switches off (maintains this state until completion of power-up test)</li></ul>
	FLASHING	GREEN / RED / OFF	Flashing sequence: the blinking sequence is used to visually identify the device. The scanner can initiate the flashing sequence in identity object 1 of the device. The MS LED and NS LED perform the flashing sequence simultaneously.
	FLASHING (1Hz)	RED	Reversible serious error: the device detected a reversible serious error. For example, an incorrect or inconsistent configuration may be considered a serious reversible error.
	ON		Irreversible serious error

NS	STATUS	COLOUR	MEANING
	OFF	GREEN	The device is switched off or has no IP address
	ON		The device is connected: at least one CIP connection has been established (any transport class) and the connection with Exclusive Owner is not interrupted
	FLASHING (1 Hz)		No connection: the IP address is configured, but no CIP connection has been established and the Exclusive Owner connection is not interrupted.
	FLASHING	RED / GREEN / OFF	Flashing sequence: The sequence visually identifies the device to the address. The scanner can start the flashing sequence in the device's Identity 1 object. The MS LED and NS LED perform the flashing sequence simultaneously.
	FLASHING FAST	RED / GREEN / OFF	Self-test: The device performs a self-test after switching on. Refer to the description of the MS LED in the self-test status.



NS	STATUS	COLOUR	MEANING
	FLASHING (1 Hz)	RED	Connection Timeout: an IP address is configured and the Exclusive Owner connection is interrupted. The NS LED only returns to steady green when all interrupted Exclusive Owner connections are re-established.
	ON		Duplicate IP: the device has detected that its IP address is already in use.

### NETWORK COMMUNICATION STATUS LED

LINK	STATUS	COLOUR	MEANING
	OFF	GREEN	The device is not connected to the Ethernet network
	ON		The device is connected to the Ethernet network
ACT	STATUS		MEANING
	OFF	YELLOW	Device does not receive/send Ethernet messages
	FLICKERING		The device receives/sends Ethernet messages

LED STATUS		DESCRIPTION
LED FLASHING		The LED switches on and off with a frequency of 1 Hz : ON for 500ms and OFF for 500ms.
LED FLASHING FAST		The MS LED or the NS LED lights up green for 250 ms, then red for 250 ms, then green (until the test is completed).
LED FLASHING		The MS LED and NS LED turn red for 500 ms, then green for 500 ms, then off for 500 ms. This sequence is repeated at least 6 times.
LED FLICKERING		The LED switches on and off with a frequency of approximately 10Hz to indicate high Ethernet activity: "On" for about 50 ms, followed by "Off" for 50 ms. The LED turns on and off at irregular intervals to indicate low Ethernet activity.



## 5.1.6.5 Technical Data

### Mechanical Technical Data

DESCRIPTION		K5727.128.48EI
Dimensions		114,5x51x52
Weight		371,50g
Body material		Aluminum
Operating temperature		-5°C÷50°C
Storage temperature		-5°C÷50°C
Degree of protection		IP65 (when mounted)


### Electrical Technical Data

DESCRIPTION		K5727.128.48EI
Power supply	Supply voltage	+24V DC ±10%
	Node power consumption only (on +24V DC logic and inputs)	65mA
	Reverse polarity protection	yes
	Maximum Altitude	2000m a.s.l.
Communication	Transmission speed	100Mbit/s
	Maximum distance between 2 nodes	100m
	Addressing data space	16 byte inputs / 16 byte outputs
	Configuration support	EDS files
EV Outputs	Maximum current per EV output	100mA
	Short circuit protection	yes
	Reverse blow protection	yes

## 5.1.7 IO-Link Interface

The IO-Link interface handles 64 bits on the input data and 64 bits on the output data, of which 32 or 48 bits (depending on version) are allocated to the valve seats only (hereafter abbreviated as 'EV').

### 5.1.7.1 Product Identification

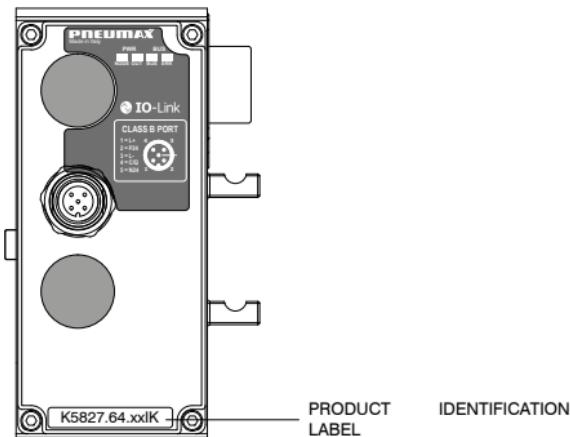

### COMPATIBILITY

	OPTYMA - S EVO	2700 EVO
K5827.64.32IK	●	●
K5827.64.48IK	●	

### 5.1.7.2 Specific safety warnings

All safety warnings given in the '[Safety Warnings](#)' section apply.


In addition:

- Accidental or improper operation of the product can cause failure or malfunctioning of the entire system.



### 5.1.7.3 Product Overview

The IO-Link 32/48EV interface is a class B IO-Link device: the power supply (L+/L-) powers the interface, while the power supply (P24/N24) powers the accessory modules (both input and output) and any solenoid valves. The two power supplies are galvanically isolated from each other.

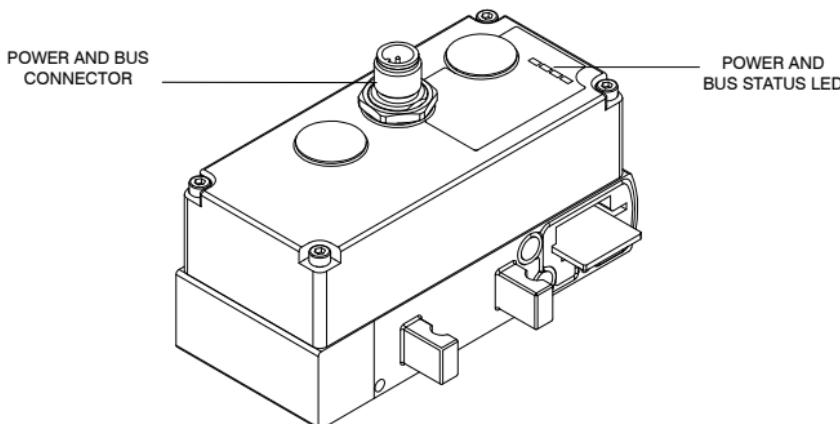

### Byte Distribution

The IO-Link node handles up to 64 bits of inputs and outputs.

Both versions have a fixed configuration of the number of inputs and outputs (8 bytes), regardless of how many are actually used.

Consequently, only those associated with inputs and outputs physically connected to the node should be considered as useful data.

The accessory modules, located to the left of the node, can be connected in any order and configuration.


E.g.

K5827.64.32IK      4 Byte (from byte 0 to byte 3) always allocated to valve positions even if not used the first byte available for output modules will be byte 4 while for inputs it will be byte 0 up to a total of 8 bytes allocated


K5827.64.48IK      6 Byte (from byte 0 to byte 5) always allocated to valve positions even if not used the first byte available for output modules will be byte 6 while for inputs it will be byte 0 up to a total of 8 bytes allocated




## Input and output data distribution with IO-Link interface K5827.64.32IK

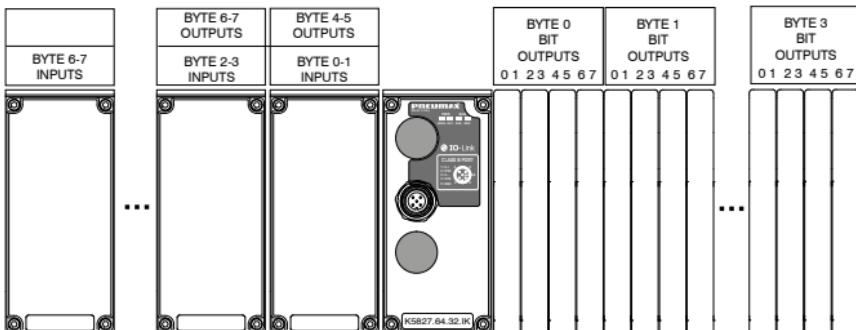

## Input and output data distribution with IO-Link interface K5827.64.48IK

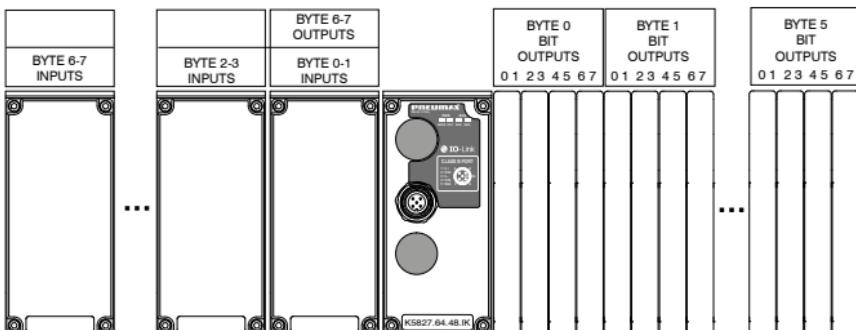

## Example of input and output data distribution with IO-Link interface K5827.64.48IK

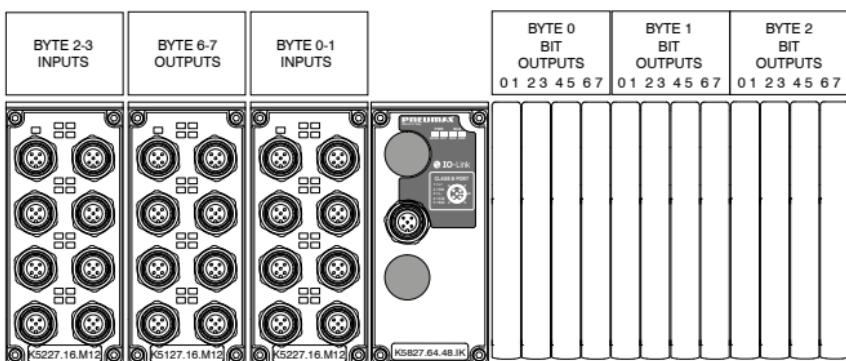




- Signal Connections - Electrical Connections**

The IO-Link interface is equipped with an M12 A-coding 5-pin Class B male port for network connection and power supply.

M12 A-coding 5P  
MALE

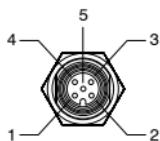

PIN	SIGNAL
1	L+
2	P24 (+ 24V DC)
3	L-
4	C/Q
5	N24 (0V DC)
THREADING	F.E.

### 5.1.7.4 Installation and Commissioning

#### Current limit

The stand-alone configuration and the integrated configuration must both comply with the current limits of the interface.

The following formula is used to calculate the maximum current on the P24/N24 supply

$$I_{24VDC\ P24/N24} = \sum_{i=1}^n I_{acc,i} + m i_{EV} < 4A$$

Where:

$n$

= is the number of installed accessory modules;

$I_{acc,i}$

= is the maximum total current absorbed by each i-th accessory, given by the sum of the absorptions on +24V DC outputs and +24V DC logic and inputs

$m$

= is the number of installed electro-pilots

$i_{EV}$

= is the average current drawn by each electro-pilot

For your convenience, the power consumption of Pneumax S.p.A. solenoid valves is shown below.

Series	$i_{EV}$
Serie 2200 "Optyma S" EVO	36mA
Serie 2700 EVO	24mA (1W version) / 100mA (2.3W version)

The maximum current  $I_{24VDC\ P24/N24}$  must be less than 4A.



#### Caution

If the total current exceeds 4A, it is necessary to supply the modules exceeding the limit with the K5030.M12 supplementary power supply module (see section "Supplementary Power Supply Module").



## CONFIGURATION FILE

Description	Value
DocumentInfo	
copyright	Pneuma x(c)2019"
releaseDate	2019-12-13
version	V1.0.00
ProfileHeader	
ProfileIdentification	IO Device Profile
ProfileRevision	1.1
ProfileName	Device Profile for IO Devices
ProfileSource	IO-Link Consortium
ProfileClassID	Device
ISO15745Reference	
ISO15745Par	1
ISO15745Edition	1
ProfileTechnology	IODD
ProfileBody	
DeviceIdentity	
DeviceID	3000
VendorID	1257
VendorName	Pneumax S.p.A.
VendorText	T_VendorText
Vendor Url	T_VendorUrl
DeviceName	T_DeviceName
DeviceFamily	T_DeviceFamily
DeviceVariantCollection	
DeviceVariant	
productId	PNX_SERIE3000-001
deviceSymbol	PNX-SERIE3000-pic.png
deviceIcon	PNX-SERIE3000-icon.png
Name textId	TN_PN_SERIE3000-001
Description	TN_PN_SERIE3000-001

Register Name	Subindex	Type	Byte	Value	Description
DeviceFunction					
Features					
blockParameter				false	
dataStorage				false	
VariableCollection					
StdVariableRef					V_DirectParameters_1
StdVariableRef					V_DirectParameters_2
ProcessDataCollection					
ProcessData					V_PD
ProcessDataIn			8		V_PDI
Datatype		RecordT	8		
TI_V_PDI_R1_Name	1	UIntegerT	1	0-255	TI_V_PDI_R1_Descr
TI_V_PDI_R2_Name	2	UIntegerT	1	0-255	TI_V_PDI_R2_Descr
TI_V_PDI_R3_Name	3	UIntegerT	1	0-255	TI_V_PDI_R3_Descr
TI_V_PDI_R4_Name	4	UIntegerT	1	0-255	TI_V_PDI_R4_Descr
TI_V_PDI_R5_Name	5	UIntegerT	1	0-255	TI_V_PDI_R5_Descr
TI_V_PDI_R6_Name	6	UIntegerT	1	0-255	TI_V_PDI_R6_Descr
TI_V_PDI_R7_Name	7	UIntegerT	1	0-255	TI_V_PDI_R7_Descr
TI_V_PDI_R8_Name	8	UIntegerT	1	0-255	TI_V_PDI_R8_Descr
ProcessDataOutput					
TI_V_PDO_R1_Name	1	UIntegerT	1	0-255	TI_V_PDO_R1_Descr
TI_V_PDO_R2_Name	2	UIntegerT	1	0-255	TI_V_PDO_R2_Descr
TI_V_PDO_R3_Name	3	UIntegerT	1	0-255	TI_V_PDO_R3_Descr
TI_V_PDO_R4_Name	4	UIntegerT	1	0-255	TI_V_PDO_R4_Descr
TI_V_PDO_R5_Name	5	UIntegerT	1	0-255	TI_V_PDO_R5_Descr
TI_V_PDO_R6_Name	6	UIntegerT	1	0-255	TI_V_PDO_R6_Descr
TI_V_PDO_R7_Name	7	UIntegerT	1	0-255	TI_V_PDO_R7_Descr
TI_V_PDO_R8_Name	8	UIntegerT	1	0-255	TI_V_PDO_R8_Descr



Register Name	Subin-dex	Type	Byte	Value	Description
V_PDin	1	Dec			
	2	Dec			
	3	Dec			
	4	Dec			
	5	Dec			
	6	Dec			
	7	Dec			
	8	Dec			
V_PDout	1	Dec			
	2	Dec			
	3	Dec			
	4	Dec			
	5	Dec			
	6	Dec			
	7	Dec			
	8	Dec			
		Dec			

VariableID	Description	Index	Subindex
M_BaseParams			
TM_Base_param	Master Command,	0	1
V_DirectParameters_1	Master Cycle Time		2
	Min Cycle Time		3
	M-Seq Capability		4
	RevisionID		5
	ProcessDataIn conf. byte		6
	ProcessDataOut conf.byte		7
	VendorID#1(MSB)		8
	VendorID#2(LSB)		9


Name	Value
SERIE 3000 SLAVE MENU for 'unconfigured' ( zero value )	
Menu	M_Observation
MenuRef	M_BaseParams
ObserverRoleMenuSet	M_BaseParams
MaintenanceRoleMenuSet	M_BaseParams
SpecialistRoleMenuSet	M_Observation
CommNetworkProfile	
xsi:type	IOLinkCommNetworkProfileT
iolinkRevision	V1.1
PhysicalLayer	
bitrate	COM2
minCycleTime	11200
sioSupported	true
mSequenceCapability	13
Connection	M5ConnectionT
ProductRef	PNX_SERIE3000-001
Wire1	
Wire2	
Wire3	NC
Wire4	
ExternalTextCollection	
PrimaryLanguage	en
T_VendorText	Pneumax S.p.A.
T_DeviceName	Serie 3000
T_VendorUrl	<a href="http://www.pneumaxspa.com">http://www.pneumaxspa.com</a>
T_DeviceFamily	Serie 3000 Slave Devices
TM_Base_param	Dir_param page#1
Process data input text list	TN_V_SERIE3000_unused_2
TI_V_PDin	Process Data In
TI_V_PDin_R1_Name	input data #1
TI_V_PDin_R2_Name	input data #2
TI_V_PDin_R3_Name	input data #3



Name	Value
TI_V_PDin_R4_Name	input data #4
TI_V_PDin_R5_Name	input data #5
TI_V_PDin_R6_Name	input data #6
TI_V_PDin_R7_Name	input data #7
TI_V_PDin_R8_Name	input data #8
TI_V_PDout	Process Data Out
TI_V_PDout_R1_Name	output data #1
TI_V_PDout_R2_Name	output data #2
TI_V_PDout_R3_Name	output data #3
TI_V_PDout_R4_Name	output data #4
TI_V_PDout_R5_Name	output data #5
TI_V_PDout_R6_Name	output data #6
TI_V_PDout_R7_Name	output data #7
TI_V_PDout_R8_Name	output data #8

## LED STATUS INDICATORS

The IO-Link module is equipped with 4 LEDs, indicating the status of the device power supply and the status of IO-Link communication as shown below.

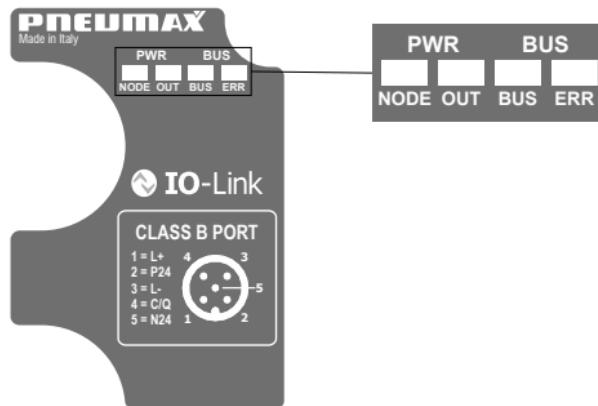

### POWER STATUS LED

NODE	STATUS	COLOUR	MEANING
	OFF	GREEN	No power supply 24V DC logics and inputs
	ON		Presence of +24V DC power supply, logic and inputs
OUT	MEANING		
	OFF	GREEN	No power supply 24V DC outputs
	ON		Presence of 24V DC power supply outputs

### BUS COMMUNICATION STATUS LED

BUS	STATUS	COLOUR	MEANING
	OFF	GREEN	IO-Link communication not active
	FLASHING		IO-Link communication active

ERR	STATUS	COLOUR	MEANING
	OFF	RED	No IO-Link communication error
	FLASHING		IO-Link communication error



## 5.1.7.5 Technical Data

### Mechanical Technical Data


DESCRIPTION	K5827.64.xxIK
Dimensions	114,5x51x52
Weight	371,50g
Body material	Aluminum
Operating temperature	-5°C÷50°C
Storage temperature	-5°C÷50°C
Degree of protection	IP65 (when mounted)

### Electrical Technical Data

DESCRIPTION	K5827.64.xxIK
Power supply	Supply voltage
	L+/L- absorption
	Reverse polarity protection
	Maximum Altitude
Communication	Specifications
	Transmission speed
	Maximum distance to master
	Addressing data space
	Configuration support
EV Outputs	Maximum current per output
	Short circuit protection
	Reverse blow protection

## 5.2 WEB PAGE

By entering the IP address of the device (e.g. <http://192.168.10.4>) in the Browser, the dedicated Web Page can be accessed. Below is an example:

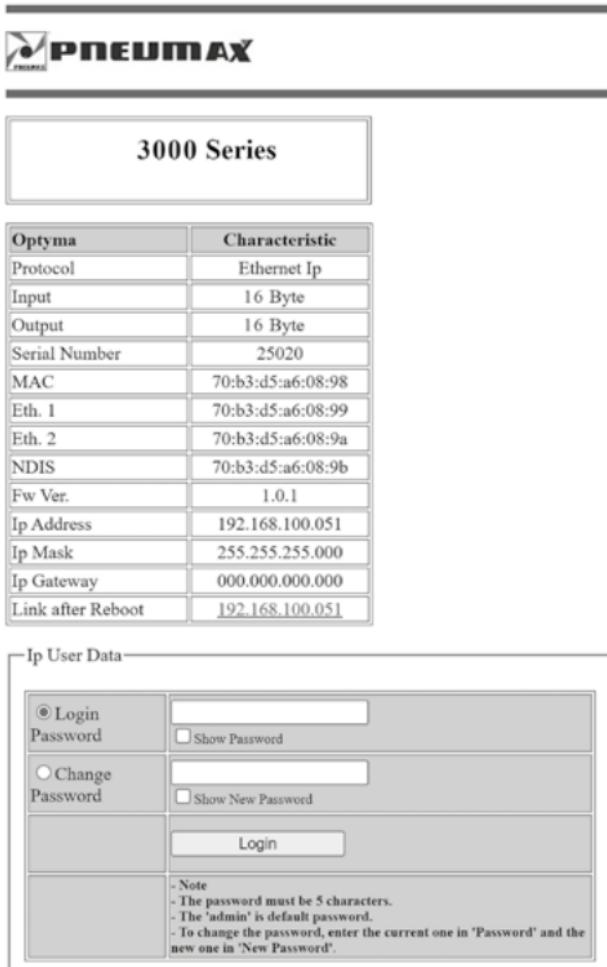

The screenshot shows a web browser displaying the Pneumax 3000 Series configuration page. At the top, there is a logo for 'PNEUMAX' and a title '3000 Series'. Below this is a table with device characteristics:

Optyma	Characteristic
Protocol	Ethernet Ip
Input	16 Byte
Output	16 Byte
Serial Number	25020
MAC	70:b3:d5:a6:08:98
Eth. 1	70:b3:d5:a6:08:99
Eth. 2	70:b3:d5:a6:08:9a
NDIS	70:b3:d5:a6:08:9b
Fw Ver.	1.0.1
Ip Address	192.168.100.051
Ip Mask	255.255.255.000
Ip Gateway	000.000.000.000
Link after Reboot	192.168.100.051

Below the table is a section titled 'Ip User Data' containing fields for 'Login' and 'Change Password' with 'Show Password' and 'Show New Password' checkboxes, and a 'Login' button. A note at the bottom of this section states:

- The password must be 5 characters.
- The 'admin' is default password.
- To change the password, enter the current one in 'Password' and the new one in 'New Password'.



### CAUTION

If a module with PROFINET IO RT protocol is being used, the device must be on the network to access the web page, so that it is assigned a valid IP address.



The page shows some descriptive parameters of the device:

PARAMETER	DESCRIPTION
Protocol	Communication protocol used by the device
Input	Number of input bytes managed by the device
Output	Number of output bytes managed by the device
Serial Number	Device serial number
MAC	MAC address associated with the device
Eth. 1	MAC address associated with Ethernet Port No. 1
Eth. 2	MAC address associated with Ethernet Port No. 2
NDIS	MAC address associated with the Ethernet interface
Fw Ver.	Firmware version installed on the device
IP Address	IP address associated with the device
IP Mask	IP mask address associated with the device
IP Gateway	IP Gateway address associated with the device
Link after Reboot	Web page link in case of IP address change after reboot



### CAUTION

The 'Ip User Data' section is not visible as it is password protected. For access, Login.

### Login

For access the edit section 'Ip User Data' enter the password. By default, the password set is: 'admin'.

Ip User Data

<input checked="" type="radio"/> Login Password	<input type="text" value="admin"/> <input checked="" type="checkbox"/> Show Password
<input type="radio"/> Change Password	<input type="text"/> <input checked="" type="checkbox"/> Show New Password
	<input type="button" value="Login"/>
	<ul style="list-style-type: none"><li>- Note</li><li>- The password must be 5 characters.</li><li>- The 'admin' is default password.</li><li>- To change the password, enter the current one in 'Password' and the new one in 'New Password'.</li></ul>

To log in, select the 'Login Password' option, enter the password 'admin' in the corresponding field and click on the 'Login' button.

**NOTE:** The characters entered in the password field are normally obscured. To make them visible, tick the 'Show Password' flag.



Below is an example of a Web Page after logging in:

ENGLISH



## 3000 Series

Optyma	Characteristic
Protocol	Ethernet Ip
Input	16 Byte
Output	16 Byte
Serial Number	25020
MAC	70:b3:d5:a6:08:98
Eth. 1	70:b3:d5:a6:08:99
Eth. 2	70:b3:d5:a6:08:9a
NDIS	70:b3:d5:a6:08:9b
Fw Ver.	1.0.1
Ip Address	192.168.100.051
Ip Mask	255.255.255.000
Ip Gateway	000.000.000.000
Link after Reboot	192.168.100.051

### Ip User Data

Reboot System	Reboot
Ip Address	192 . 168 . 100 . 051
Ip Mask	255 . 255 . 255 . 000
Ip Gateway	000 . 000 . 000 . 000
Save Data	Save

**NOTE:** Once logged in, the session remains active until the next reboot of the device or up to a maximum of 30 minutes if no activity is detected.



## CHANGE PASSWORD

To change the password for accessing the 'Ip User Data' section, follow the steps below:

- Enter the currently set password ('admin' if it has never been changed) in the 'Login Password' field.
- Select the 'Change Password' option and enter the new password in the corresponding field.



### CAUTION

The new password entered must have 5 characters.

- Click the 'Change Password' button.

Ip User Data	
<input type="radio"/> Login Password	<input type="text" value="admin"/> <input checked="" type="checkbox"/> Show Password
<input type="radio"/> Change Password	<input type="text" value="Psw12"/> <input checked="" type="checkbox"/> Show New Password
	<input type="button" value="Change Password"/>
	<p>- Note - The password must be <b>5 characters</b>. - The 'admin' is default password. - To change the password, enter the current one in 'Password' and the new one in 'New Password'.</p>

When the procedure is completed, the new password is saved and access is gained to the 'Ip User Data' section.



## PASSWORD RECOVERY

To recover passwords, follow the procedure explained in the section entitled "PROCEDURE FOR RECOVERY THROUGH SUPPLY".

Once the web page has been accessed, the default password 'admin' is temporarily reset. At this point, it is then possible to access the 'Ip User Data' section with this password or set a new password using the procedure explained in the previous section.

### Ip User Data

<input type="radio"/> Login Password	<input type="text" value="admin"/> <input checked="" type="checkbox"/> Show Password
<input checked="" type="radio"/> Change Password	<input type="text"/> <input checked="" type="checkbox"/> Show New Password
<input type="button" value="Change Password"/>	
<p>- Note</p> <ul style="list-style-type: none"> <li>- The password must be 5 characters.</li> <li>- The 'admin' is default password.</li> <li>- To change the password, enter the current one in 'Password' and the new one in 'New Password'.</li> </ul>	



#### CAUTION

The password 'admin' is only temporarily valid in the recovery procedure. When the device is restarted, the valid password will revert to the one previously set.

## WEB PAGE PARAMETERS

In the section called 'IP User Data', it is possible to change certain IP parameters of the device, namely IP Address, IP Mask and IP Gateway.

### Ip User Data

Reboot System	<input type="button" value="Reboot"/>						
Ip Address	192	.	168	.	010	.	002
Ip Mask	255	.	255	.	255	.	000
Ip Gateway	000	.	000	.	000	.	000
Save Data	<input type="button" value="Save"/>						



When the section is accessed, the corresponding fields are populated with the addresses currently associated with the device. To change them, you must overwrite these addresses and click the 'Save' button.

To apply the changes, reboot the device. The reboot can be done manually or directly on the web page by clicking the 'Reboot' button.



### **CAUTION**

Once the IP address has been changed, the opened Web Page is no longer valid, as it refers to the previous IP address. In order to be able to access the web page again, the new IP address of the device must then be entered into the browser. If a manual reboot was performed, you can click the 'Link after Reboot' field on the web page to be automatically redirected to the new web page.

## **3000 Series**

<b>Optyma</b>	<b>Characteristic</b>
Protocol	Ethernet Ip
Input	16 Byte
Output	16 Byte
Serial Number	25020
MAC	70:b3:d5:a6:08:98
Eth. 1	70:b3:d5:a6:08:99
Eth. 2	70:b3:d5:a6:08:9a
NDIS	70:b3:d5:a6:08:9b
Fw Ver.	1.0.1
Ip Address	192.168.100.051
Ip Mask	255.255.255.000
Ip Gateway	000.000.000.000
Link after Reboot	<u>192.168.100.051</u>



The following parameters can also be changed for the PROFINET IO RT protocol:

PARAMETER	DESCRIPTION
Profinet Name	Name of the device displayed in the system <sup>(1)</sup> Configuration mode at device start-up.
Profinet Service	It can be set in 2 modes: • Setup Profinet by Stack <sup>(2)</sup> : PLC-managed mode, i.e. the IP address is assigned by the master PLC • Setup Profinet by User <sup>(3)</sup> : User-managed mode, i.e. IP address is assigned manually

(1) The 'Profinet Name' field can be changed if the 'Setup by User' mode of the Profinet Service has been selected. The choice of name must comply with the PROFINET V2.3 specification. If an impermissible character is entered in the 'Profinet Name' field, it will be replaced by the character 'x'. The maximum permissible length for the name is 16 characters.

#### Ip User Data

Reboot System	Reboot			
Ip Address	192	168	010	003
Ip Mask	255	255	255	000
Ip Gateway	000	000	000	000
Profinet Name	Serie3000pns			
Profinet Service	Setup Profinet Stack <input checked="" type="radio"/>			
Save Data	Save			



(2) When selecting the "Setup Profinet Stack" mode [A], all network parameters shown on the Web Page [B] do not correspond to the current configuration, as these are written via the development environment (e.g. Proneta or TIA Portal).



## 3000 Series

Optyma	Characteristic
Protocol	Profinet
Input	16 Byte
Output	16 Byte
Serial Number	1
MAC	70:b3:d5:a6:00:04
Eth. 1	70:b3:d5:a6:00:05
Eth. 2	70:b3:d5:a6:00:06
NDIS	70:b3:d5:a6:00:07
Fw Ver.	1.0.1
Ip Address	192.168.010.003
Ip Mask	255.255.255.000
Ip Gateway	000.000.000.000
Link after Reboot	192.168.010.003



**B**



—Ip User Data—

Reboot System	Reboot
Ip Address	192 . 168 . 010 . 003
Ip Mask	255 . 255 . 255 . 000
Ip Gateway	000 . 000 . 000 . 000
Profinet Name	Serie3000pns
Profinet Service	Setup Profinet Stack
Save Data	Save

**A**



(3) By selecting the "Setup by User" mode [A], all network settings [B] are managed via Web Page.



ENGLISH

## 3000 Series

Optyma	Characteristic
Protocol	Profinet
Input	16 Byte
Output	16 Byte
Serial Number	1
MAC	70:b3:d5:a6:00:04
Eth. 1	70:b3:d5:a6:00:05
Eth. 2	70:b3:d5:a6:00:06
NDIS	70:b3:d5:a6:00:07
Fw Ver.	1.0.1
Ip Address	192.168.010.003
Ip Mask	255.255.255.000
Ip Gateway	000.000.000.000
Link after Reboot	192.168.010.003

B

### Ip User Data


Reboot System	Reboot
Ip Address	192 . 168 . 010 . 003
Ip Mask	255 . 255 . 255 . 000
Ip Gateway	000 . 000 . 000 . 000
Profinet Name	Serie3000pns
Profinet Service	Setup Profinet by User
Save Data	Save

A



**CAUTION**

 In this mode, it is necessary to check that the option 'IP address is set directly at the device' is selected in the device configuration in the development environment (e.g. TIA Portal).

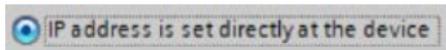



## RECOVERY PROCEDURE BY POWER SUPPLY

In case you want to access the device's web page but do not know the IP address and/or password, perform the following retrieval procedure, which temporarily sets the IP address: 192.168.100.5 and the default password: 'admin'.

Perform the following steps to complete the procedure:

1. Power up the device for about 4 seconds and switch it off by removing the power supply.
2. Perform the procedure in step 1. five times in a row.
3. Power up the device for the sixth time and wait for about 4 seconds. Do not switch off the device.
4. Open the Browser and type the IP address in the URL field: <http://192.168.100.5/>
5. You can now access the Web Page and thus change your IP address and/or password.



### 3000 Series

Optima	Characteristic
Protocol	Ethernet Ip
Input	16 Byte
Output	16 Byte
Serial Number	25020
MAC	70:b3:d5:a6:08:98
Eth. 1	70:b3:d5:a6:08:99
Eth. 2	70:b3:d5:a6:08:9a
NDIS	70:b3:d5:a6:08:9b
Fw Ver.	1.0.1
Ip Address	192.168.100.005
Ip Mask	255.255.255.000
Ip Gateway	000.000.000.000
Link after Reboot	192.168.100.005

#### Ip User Data

Reboot System	Reboot
Ip Address	192 <input type="text"/> 168 <input type="text"/> 100 <input type="text"/> 005
Ip Mask	255 <input type="text"/> 255 <input type="text"/> 255 <input type="text"/> 000
Ip Gateway	000 <input type="text"/> 000 <input type="text"/> 000 <input type="text"/> 000
Save Data	Save



### **CAUTION**

In the case of a restart without applying any changes, the device will load the previously set parameters.



### **CAUTION**

In order to be able to access the Web Page with IP address 192.168.100.5, the network card of the PC you are using must be set up correctly, i.e. it must have an IP address belonging to the same subnet (e.g. 192.168.100.200).  
It is therefore advisable to check the network card settings before performing the recovery procedure.

## **NETWORK SETTINGS RECOVERY PROCEDURE VIA WEB BROWSER**

In case you want to restore all device settings to factory data, you can perform a recovery procedure via Web Page.

Once you have accessed the Web Page, in the 'IP User Data' section fill in the fields as shown in the image below and click on the 'Save' button:

—Ip User Data—

Reboot System	Reboot						
Ip Address	12	.	21	.	12	.	21
Ip Mask	255	.	255	.	255	.	000
Ip Gateway	000	.	000	.	000	.	000
Save Data	<input type="button" value="Save"/>						


To access the web page again, it will then be necessary to type in the factory IP address into the browser.

## 5.3 Accessory Modules

Module Kit	Type	Page
K5127.16.M12	Digital output module kit Nr. 08 M12 5 Poles Female Connector	101
K5227.16.M12	Digital input module kit Nr. 08 M12 5 Poles Female Connector	105
K5027.M12	Supplementary power supply module kit Nr. 01 M12 4 Poles Male Connector	109

### 5.3.1 16 digital outputs M12 connectors module kit

#### 5.3.1.1 Product Identification

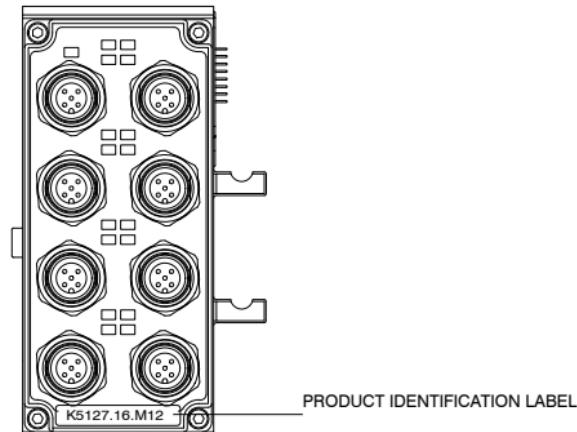

#### COMPATIBILITY


	OPTYMA - S EVO	2700 EVO
K5127.16.M12	●	●



### 5.3.1.2 Specific safety warnings

All safety warnings given in the '[Safety Warnings](#)' section apply.

### 5.3.1.3 Product Overview

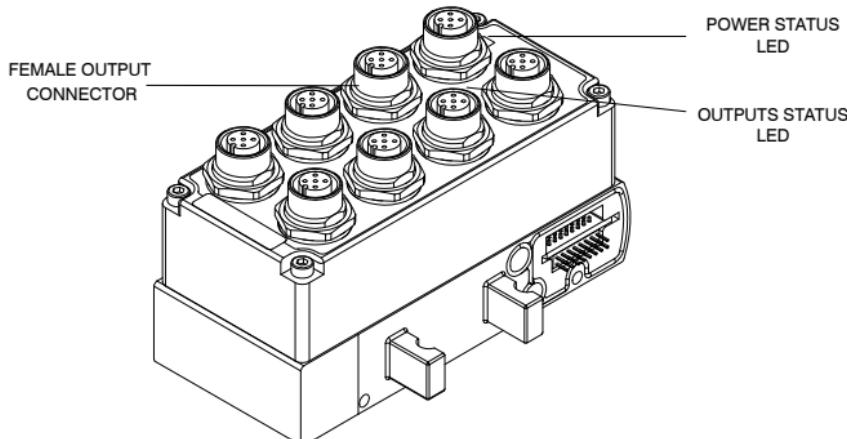


### Bit Correspondence

Output	OUT1-2	OUT3-4	OUT5-6	OUT7-8	OUT9-10	OUT11-12	OUT13-14	OUT15-16
# bit	0-1	2-3	4-5	6-7	8-9	10-11	12-13	14-15

- **Signal Connections**

M12 A-coding 5P FEMALE

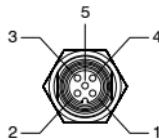

PIN	SIGNAL
1	N.C.
2	OUTPUT B
3	0V DC
4	OUTPUT A
5	F.E.
THREADING	F.E.

### 5.3.1.3.1 Installation and Commissioning

- Cable connection

The cable connectors to be used are shown in the annex '[Cable and Connector Counterparts](#)'. However, other connectors with equivalent specifications can be used.


#### Caution

Always observe the tightening torques given in the table under "[Tightening torques](#)".



If a connector is not used, to ensure IP65 protection, the appropriate plug Code 5300.T12 must be installed with a tightening torque as indicated in the table at "[Tightening torques](#)".

### LED STATUS INDICATORS

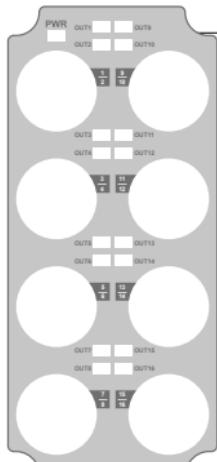

Name	Description	Status	
PWR	Power supply presence		GREEN
	No power supply		
OUT1... OUT16	Output status		AMBER



### 5.3.1.4 Technical Data

#### Mechanical Technical Data


DESCRIPTION	K5127.16.M12
Dimensions	114,5x51x52
Weight	451,50g
Body material	Aluminum
Operating temperature	-5°C÷50°C
Storage temperature	-5°C÷50°C
Degree of protection	IP65 (when mounted)

#### Electrical Technical Data

DESCRIPTION	K5127.16.M12
Maximum deliverable current per module	100mA
Short-circuit/overload protection	yes (electronic), triggered at 1.6A
Maximum Altitude	2000m s.l.m.
Outputs mode	PNP
Permissible cable length	<30m
Space occupied on input data	2 byte
Absorption module only + 24V DC output	20mA

## 5.3.2 16 digital inputs M12 connectors module kit

### 5.3.2.1 Product Identification

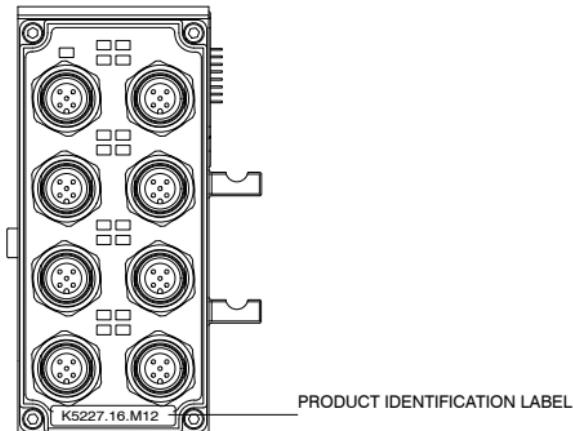


#### COMPATIBILITY

	OPTYMA - S EVO	2700 EVO
K5227.16.M12	●	●

### 5.3.2.2 Specific safety warnings

All safety warnings given in the '[Safety Warnings](#)' section apply.

### 5.3.2.3 Product Overview

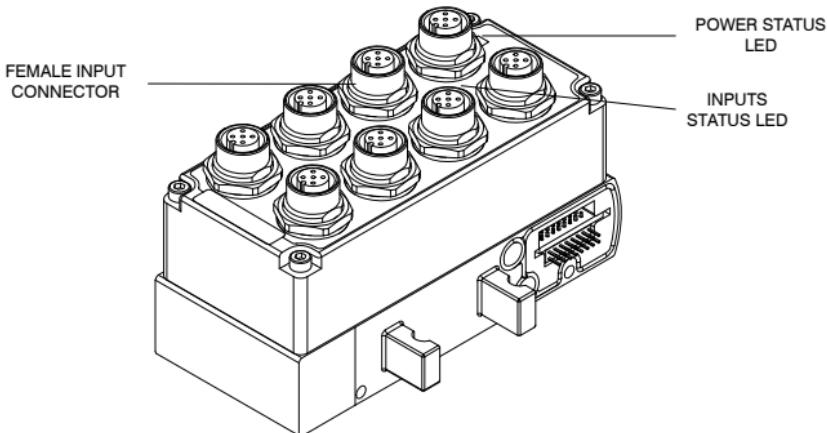




## Bit Correspondence

INPUT	IN 1-2	IN 3-4	IN 5-6	IN 7-8	IN 9-10	IN 11-12	IN 13-14	IN 15-16
# bit	0-1	2-3	4-5	6-7	8-9	10-11	12-13	14-15

- Signal Connections

M12 A-coding 5P FEMALE

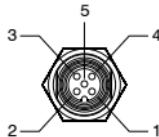

PIN	SIGNAL
1	+24V DC logic and inputs
2	INPUT B
3	0V DC
4	INPUT A
5	F.E.
THREADING	F.E.

### 5.3.2.4 Installation and Commissioning

- Cable connection

The cable connectors to be used are shown in the annex '[Cable and Connector Counterparts](#)'. However, other connectors with equivalent specifications can be used.


**Caution**

Always observe the tightening torques given in the table under "[Tightening torques](#)".



If a connector is not used, to ensure IP65 protection, the appropriate plug Code 5300. T12 must be installed with a tightening torque as indicated in the table at "[Tightening torques](#)".

## LED STATUS INDICATORS

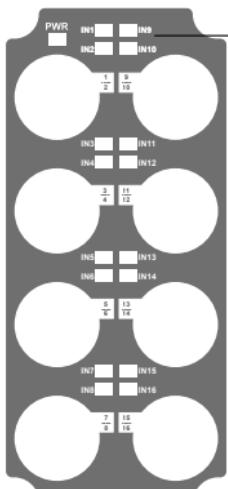

ENGLISH

Name	Description	Status		
PWR	Power supply presence		GREEN	Module correctly powered +24V DC logic and inputs
	No power supply			Module not powered
IN1... IN16	Input status		GREEN	Input activated, regardless of user connection
				Input not activated



### 5.3.2.5 Technical Data

#### Mechanical Technical Data

DESCRIPTION	K5227.16.M12
Dimensions	114,5x51x52
Weight	455,50g
Body material	Aluminum
Operating temperature	-5°C÷50°C
Storage temperature	-5°C÷50°C
Degree of protection	IP65 (when mounted)

#### Electrical Technical Data

DESCRIPTION	K5227.16.M12
Maximum deliverable current per module	750 mA
Protection Overcurrent	yes (electronic), triggered at 800mA
Reverse polarity	yes
Maximum Altitude	2000m s.l.m.
Input mode	PNP
Input impedance	3kΩ
Permissible cable length	<30m
Space occupied on input data	2 byte
Absorption module only + 24V DC logic and inputs	20mA (1)

1 : Each terminal board input, when active, increases consumption by 8mA.


Hence the maximum load per supply pin varies as follows:

- o for a single input it is 750mA
- o for 8 inputs it is:  $750\text{mA} - (8 \times 8\text{mA}) = 686\text{mA}$
- o for 16 inputs it is:  $750\text{mA} - (16 \times 8\text{mA}) = 622\text{mA}$



### 5.3.3 Supplementary power supply module kit

#### 5.3.3.1 Product Identification

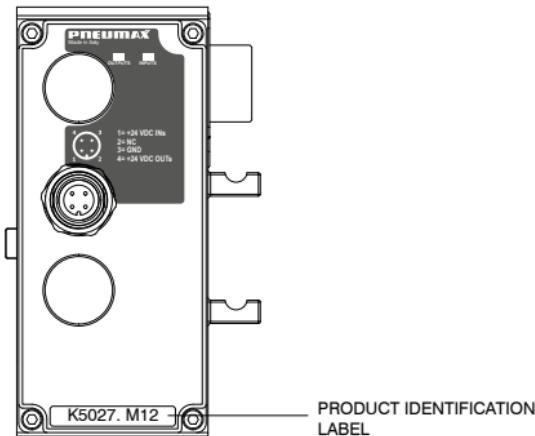


#### COMPATIBILITY

	OPTYMA - S EVO	2700 EVO
K5027.M12	●	●
OPTYMA - S EVO	●	●

#### 5.3.3.2 Specific safety warnings

All safety warnings given in the '[Safety Warnings](#)' section apply.


#### 5.3.3.3 Product Overview

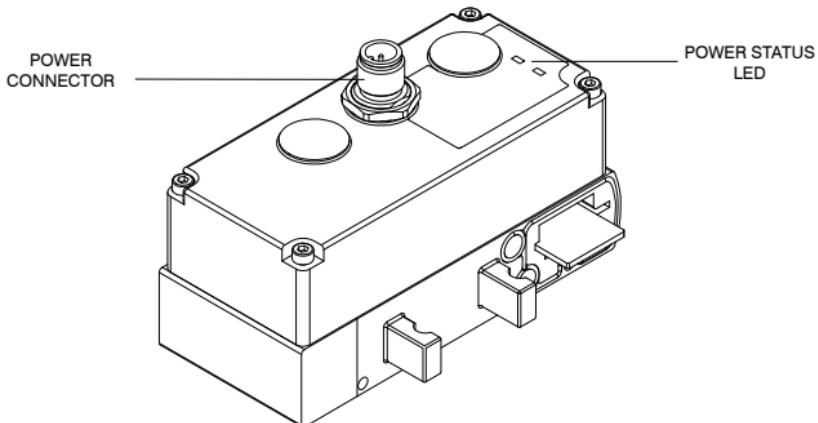



- **Signal**


M12 A-coding 4P MALE

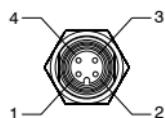

PIN	DESCRIPTION	MAX CURRENT
1	+24V DC logic and input	4A
2	N.C.	-
3	0V DC	4A
4	+24V DC (OUTPUTS)	4A
THREADING	F.E.	

### 5.3.3.4 Installation and Commissioning

The module provides additional power supply to the modules downstream of it, resetting the current limits of the interface (see section '[current limits](#)').

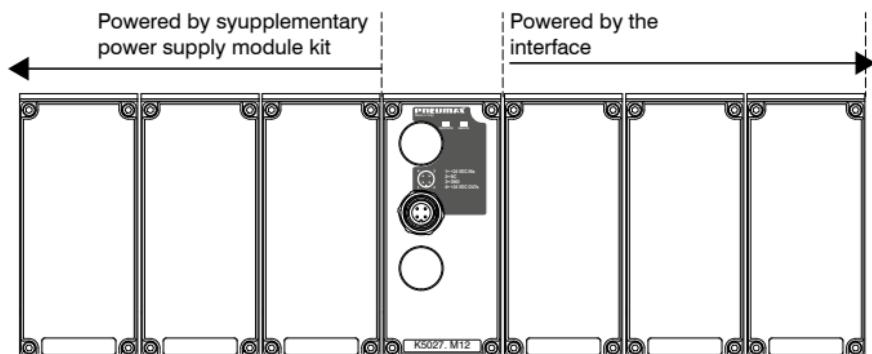

The cable connectors to be used are shown in the annex '[Cable and Connector Counterparts](#)'.


However, other connectors with equivalent specifications can be used.

**Caution**

The reference voltage (0V DC) must be the same as the main interface

Always observe the tightening torques given in the table under "[Tightening torques](#)".

**The additional power supply module does not supply EVs on the manifold.**

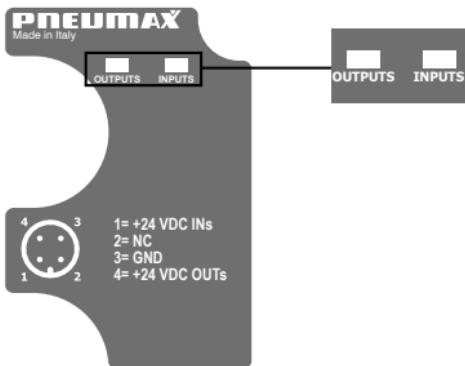

### LED STATUS INDICATORS

Nome	Description	Status	
INPUTS	Power supply +24V DC logic and module inputs placed 'downstream'.	GREY	Power supply presence
		WHITE	No power supply
OUTPUTS	Power supply +24V DC outputs of modules placed 'downstream'.	GREY	Power supply presence
		WHITE	No power supply



### 5.3.3.5 Technical Data

#### Mechanical Technical Data

DESCRIPTION	K5027.M12
Dimensions	114,5x51x52
Weight	403,50g
Body material	Aluminum
Operating temperature	-5°C÷50°C
Storage temperature	-5°C÷50°C
Degree of protection	IP65 (when mounted)

#### Electrical Technical Data



DESCRIPTION	K5027.M12
Power supply	Supply voltage
	Reverse polarity protection
	Maximum Altitude

## 6. ANNEXES



### 6.1 Cables and Connectors Counterparts

ENGLISH



Straight M12 A-coding 4P female connector

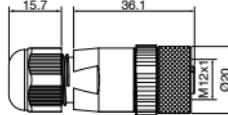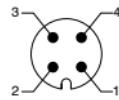**Coding:** 5312A.F04.00



Straight M12 A-coding 5P female connector

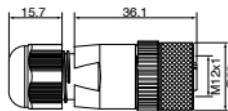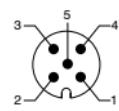**Coding:** 5312A.F05.00



Straight M12 A-coding 5P male connector

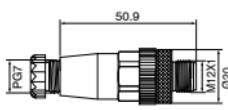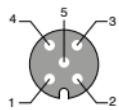**Coding:** 5312A.M05.00



Straight M12 D-coding 4P male connector

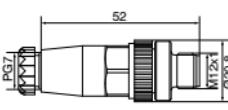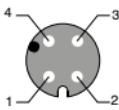**Coding:** 5312D.M04.00



Straight shielded M12 D-coding 4P female

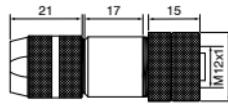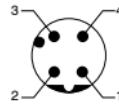**Coding:** 5312DSH.M04.00


### Straight M12 B-coding 5P female connector

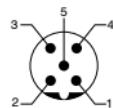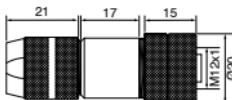

### Straight M12 B-coding 5P female connector

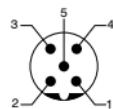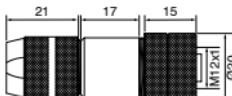

M12 cap

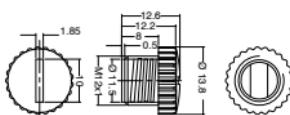

**Coding:** 5300.T12



## 6.2 Tightening torques

The connectors must all be tightened with the torque indicated in the table. Incorrect tightening does not guarantee electrical contact, IP65 sealing and may damage the product.

Connector type	Tightening torque
M12 connector	0,6 Nm
Cap 5300 - T12	0,7 Nm



## 7. MAINTENANCE AND CLEANING

Do not connect or disconnect the device when powered! Do not open and/or disassemble live parts. Once the power has been switched off, wait a few minutes before opening or dismantling any parts of the unit.

Remove any dust deposits periodically using a damp cloth.

Do not use aggressive, alcohol-based products.

For maintenance work on internal components, please contact PNEUMAX SPA.

## 8. HANDLING AND STORAGE CONDITIONS

### **Handling:**

Only transport the product in its original packaging.

### **Storage:**

Store in original packaging to avoid damage from impact.

Observe the temperature conditions indicated in the 'Technical Data'.

Keep the product in stock for the shortest possible time.

## 9. DISMANTLING AND DISPOSAL

### **Dismantling the product:**

Switch off the power source and compressed air.

Disconnect the power cable.

Disconnect the power cables.

### **Disposal of the product :**

This product must not be disposed of as municipal waste.

Check local regulations and guidelines for proper disposal of this product, in order to reduce the impact on human health and on the environment.



**PNEUMAX**

**PNEUMAX S.p.A.**

Via Cascina Barbellina, 10

24050 Lurano (BG) - Italy

P. +39 035 41 92 777

[info@pneumaxspa.com](mailto:info@pneumaxspa.com)

D.MN.29-GB-12/2025



[pneumaxspa.com](http://pneumaxspa.com)